


**Gary Metall-Terrassenschrank 2/  
Gary Metal Terrace Cabinet 2**

**weka**

**Art.-Nr: 7010013**



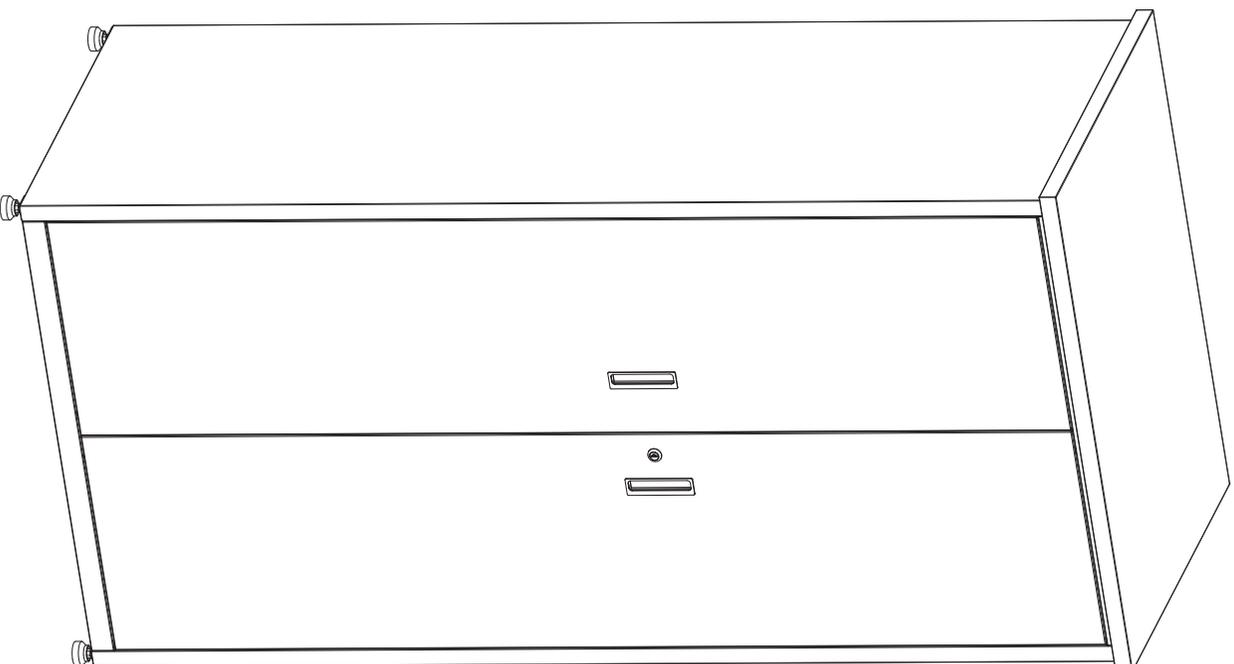


**Montageanleitung/  
Assembly instructions**


**weka Holzbau GmbH  
Postfach 20 02 04  
D-17013 Neubrandenburg**






















**[www.weka-holzbau.com](http://www.weka-holzbau.com)**

**Sie erreichen uns/ You can reach us:  
Mo - Fr 08:30 - 18:00 Uhr  
+49 (0)395/42908-0**

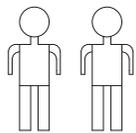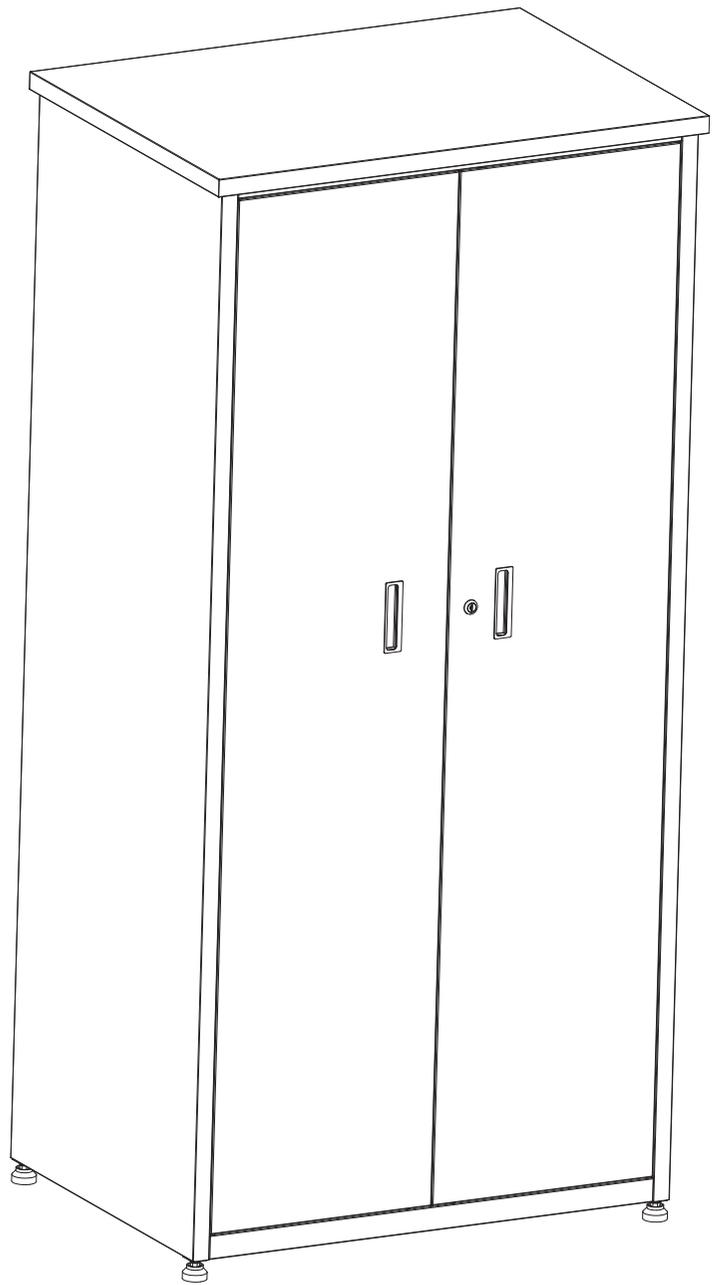


40Min


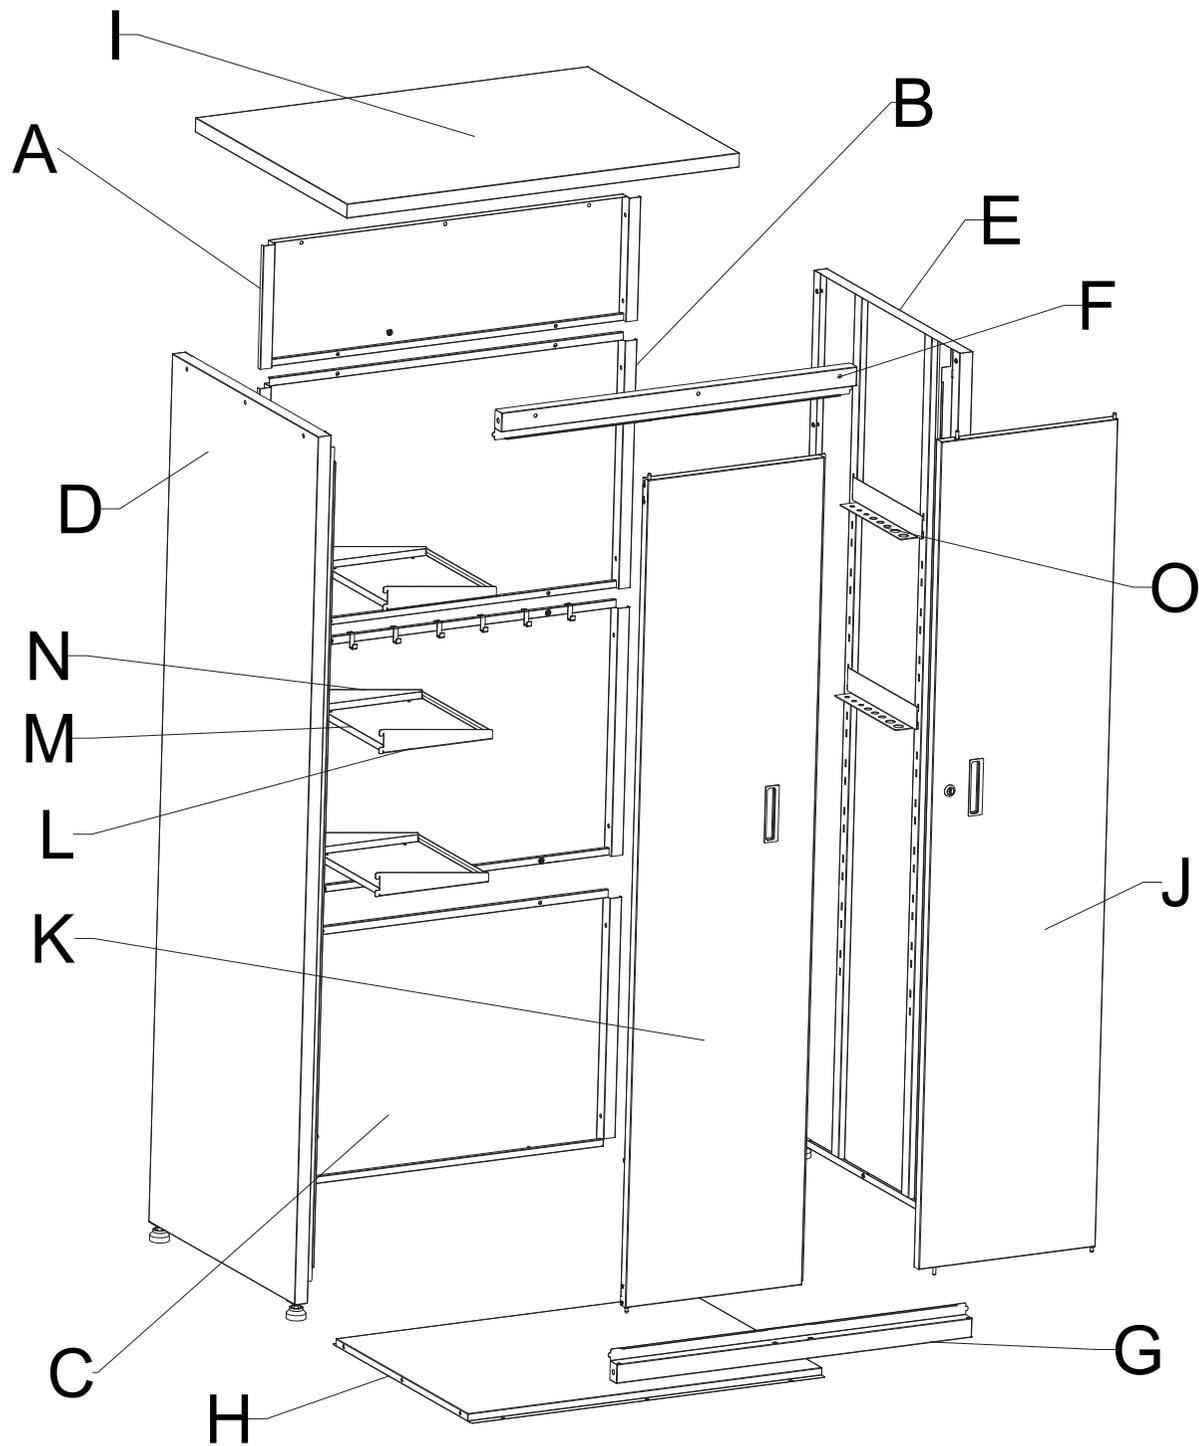

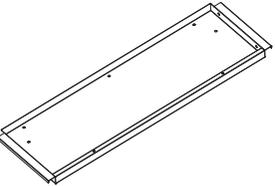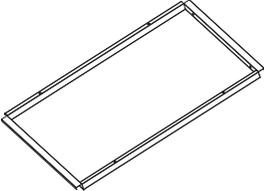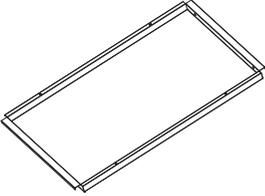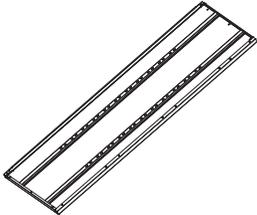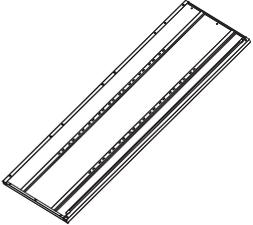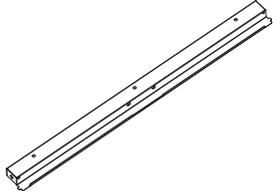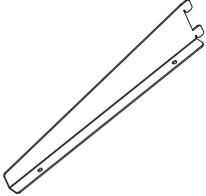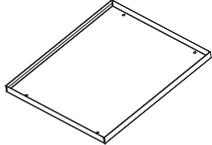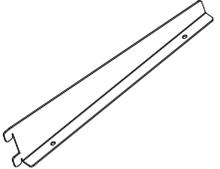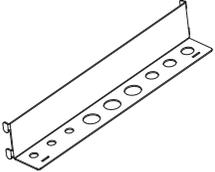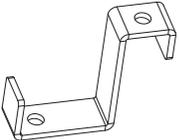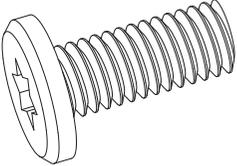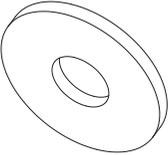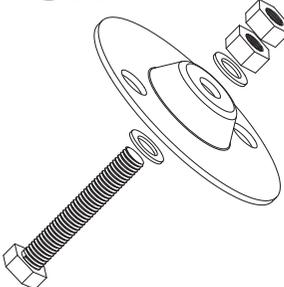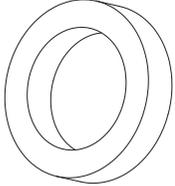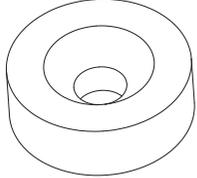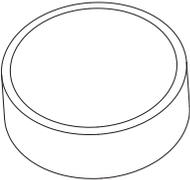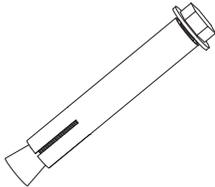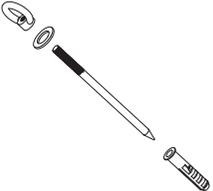
<p><b>Ax1</b></p> 	<p><b>Bx2</b></p> 	<p><b>Cx1</b></p> 	<p><b>Dx1</b></p> 	<p><b>Ex1</b></p> 	<p><b>Fx1</b></p> 	<p><b>Gx1</b></p> 
<p><b>Hx1</b></p> 	<p><b>Ix1</b></p> 	<p><b>Jx1</b></p> 	<p><b>Kx1</b></p> 	<p><b>Lx3</b></p> 	<p><b>Mx3</b></p> 	<p><b>Nx3</b></p> 
<p><b>Ox2</b></p> 	<p><b>Px10</b></p> 	<p><b>Qx49</b></p>  <p>M4x10mm</p>	<p><b>Rx49</b></p>  <p>Ø4xØ12x1mm</p>	<p><b>Sx4</b></p> 	<p><b>Tx2</b></p> 	<p><b>Ux4</b></p> 
<p><b>Vx4</b></p>  <p>M4x14mm</p>	<p><b>Wx4</b></p> 	<p><b>Xx12</b></p>  <p>M4x6mm</p>	<p><b>Yx12</b></p> 	<p><b>Zx1</b></p> 	<p><b>1x4</b></p> 	<p><b>2x2</b></p> 


# STEP 1

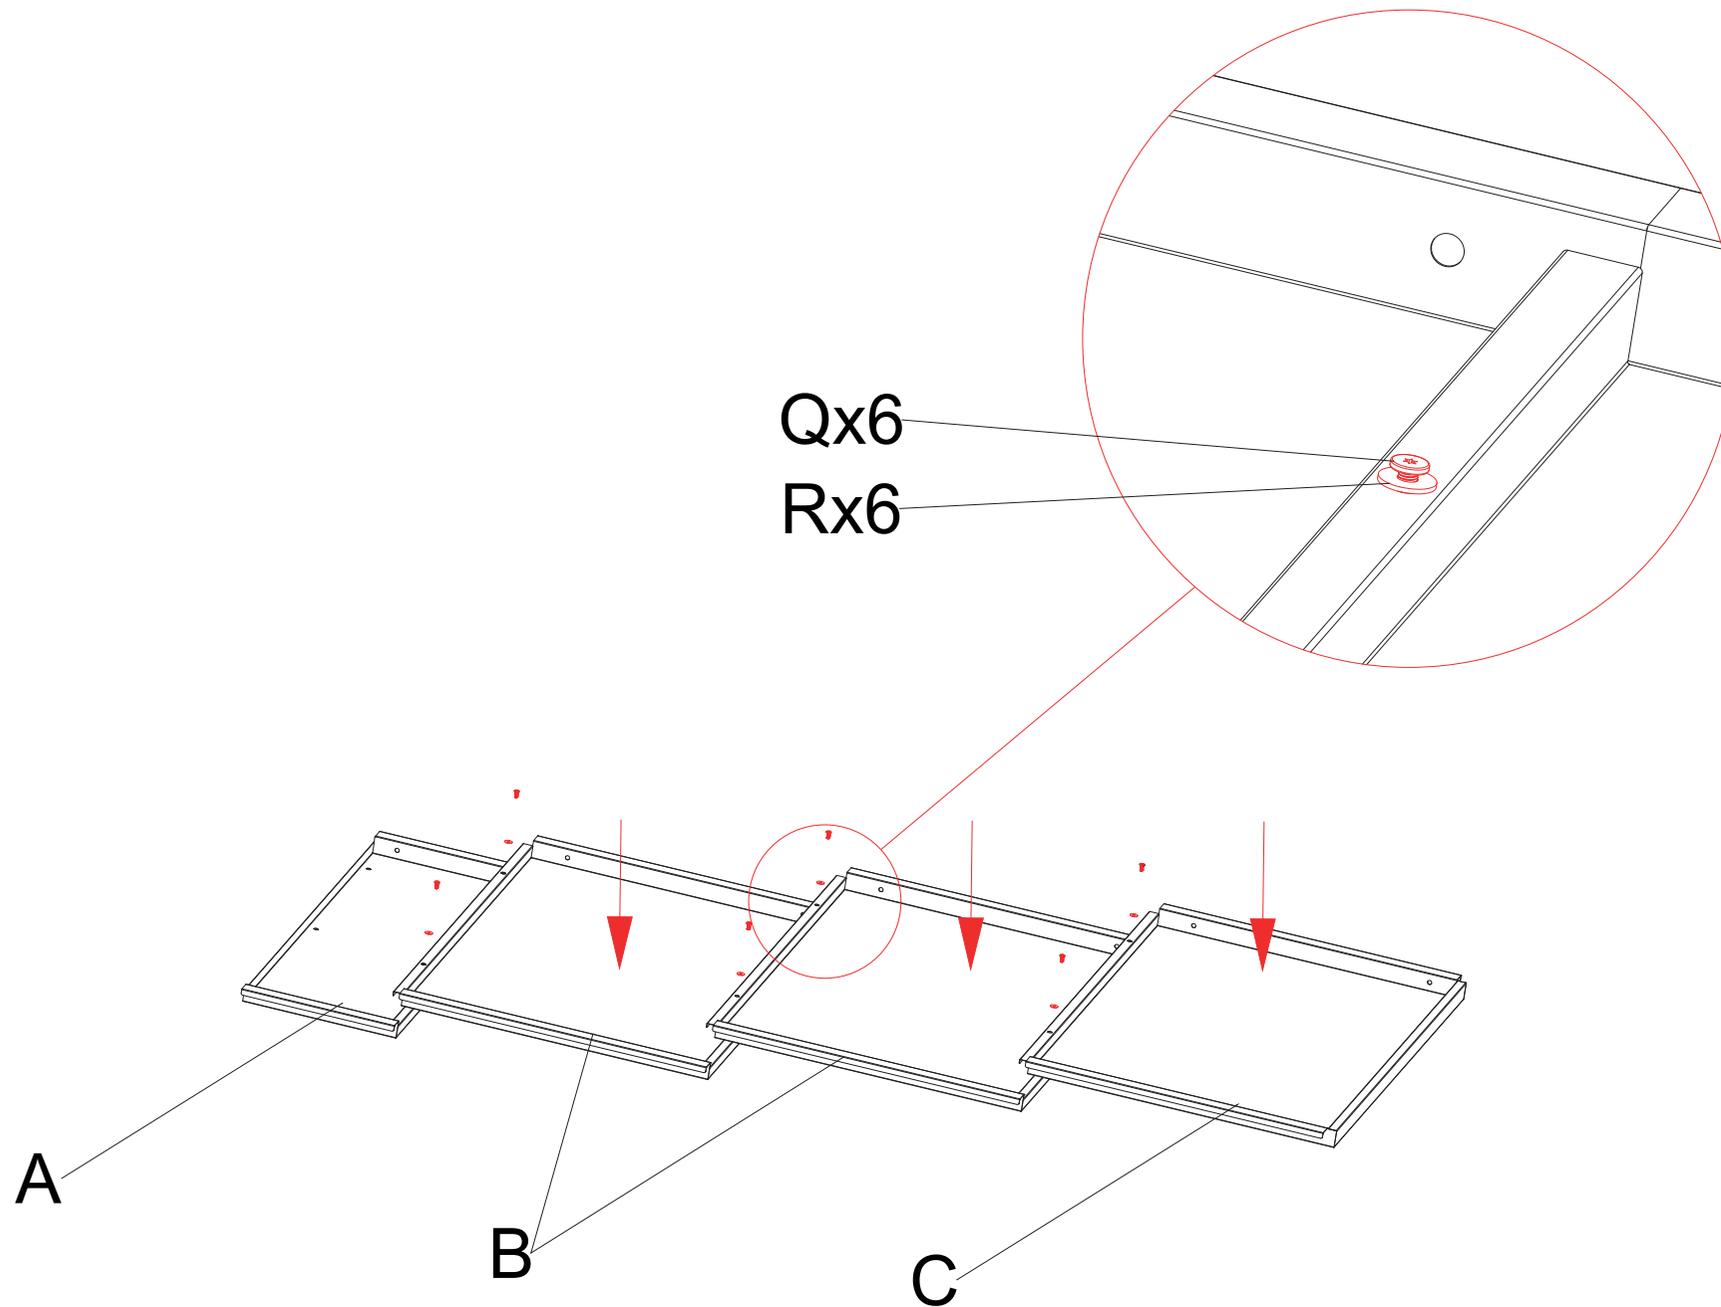



# STEP2

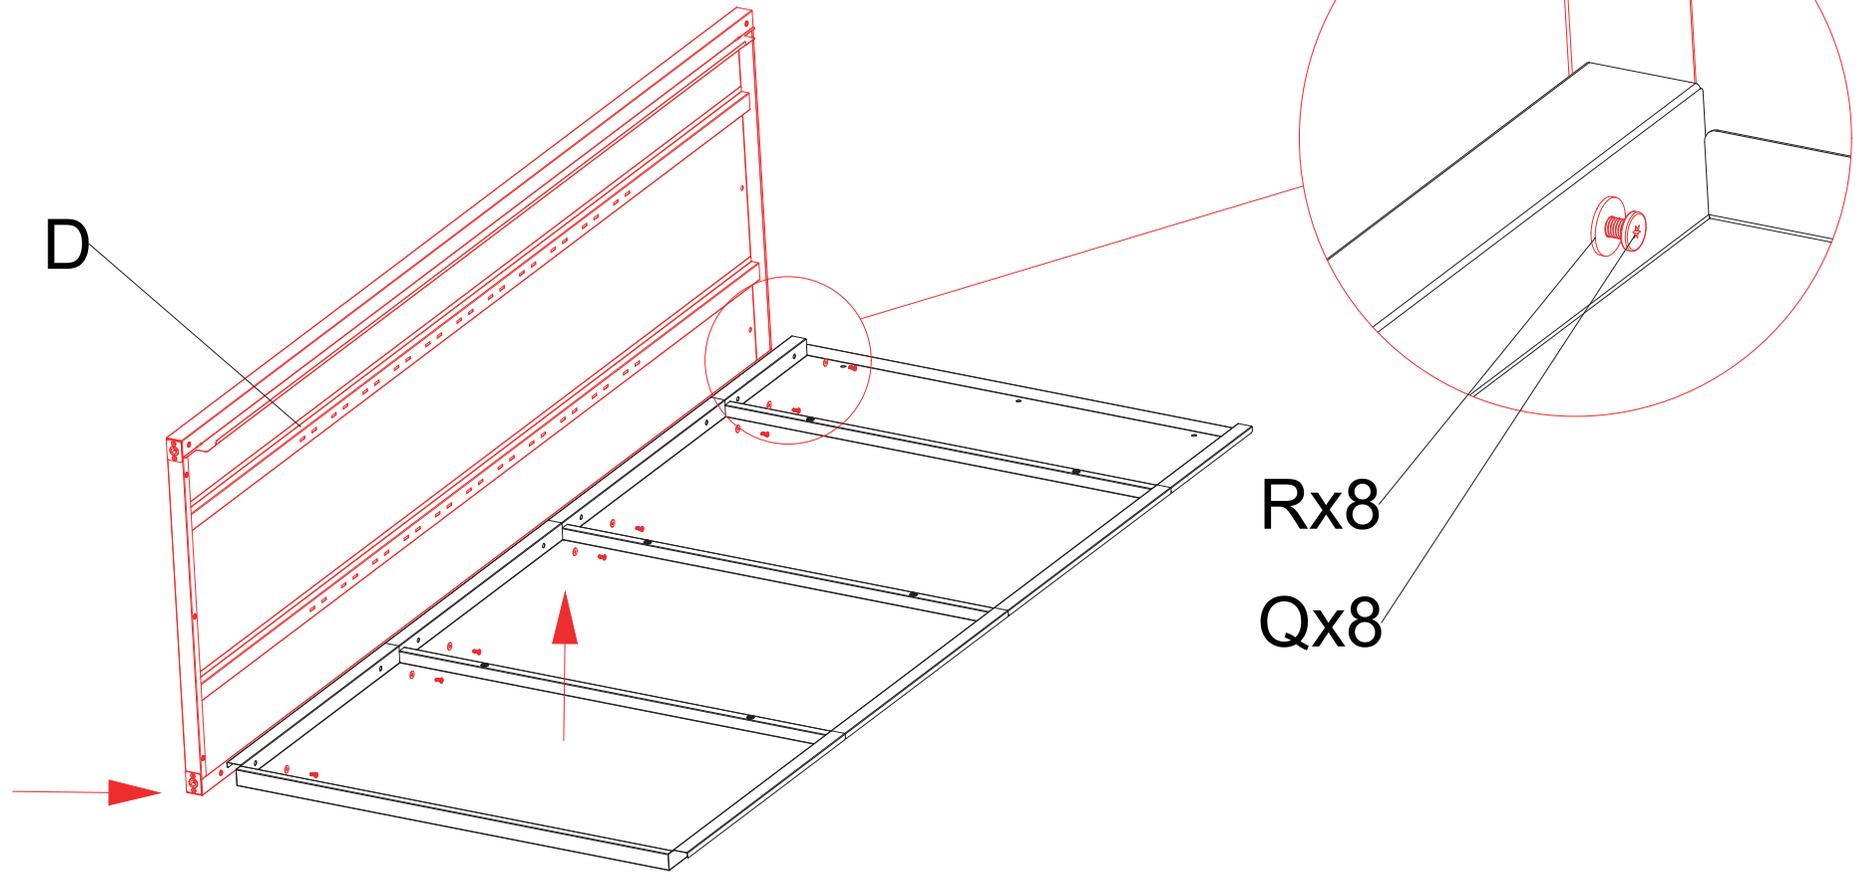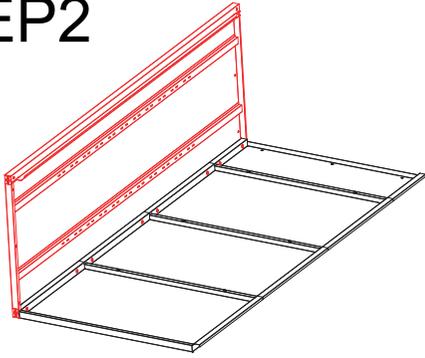





# STEP 3

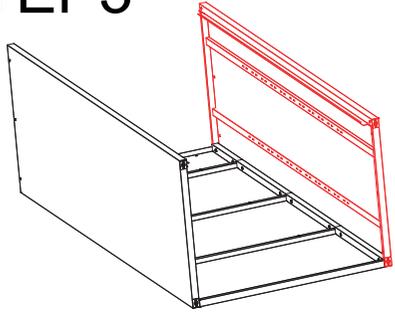

Qx8  
Rx8

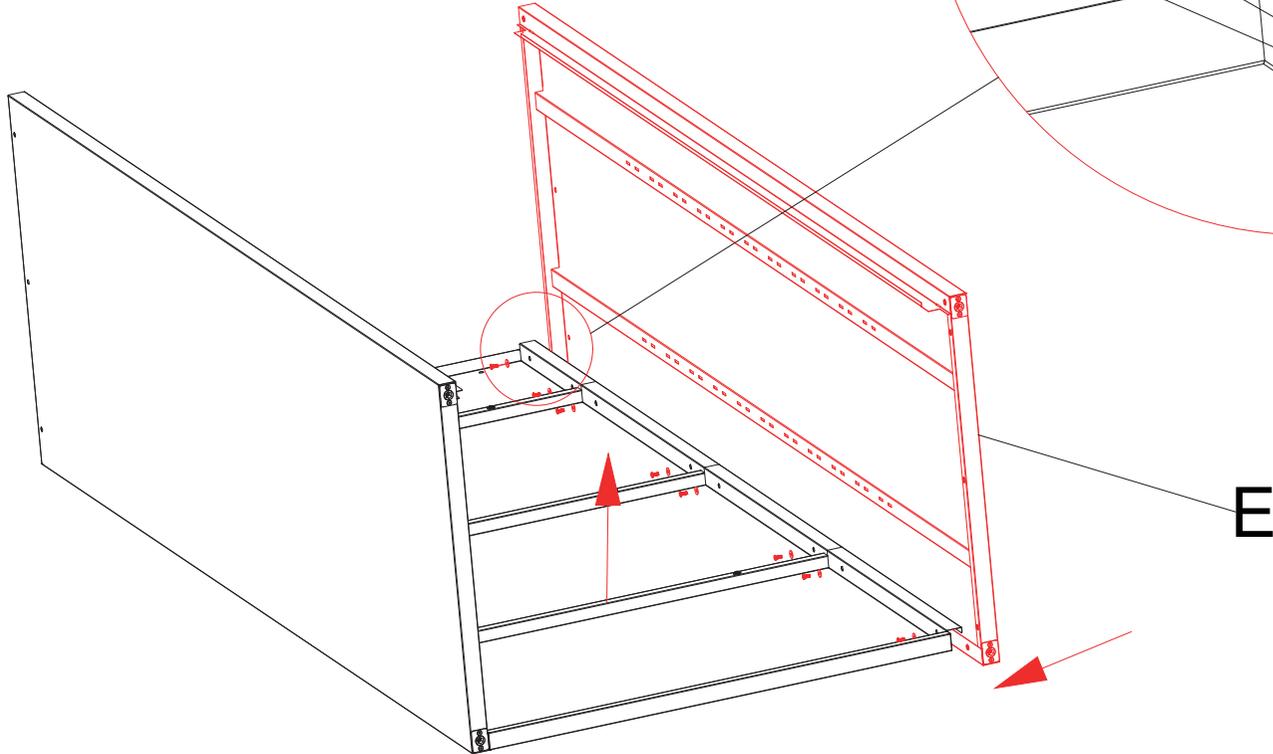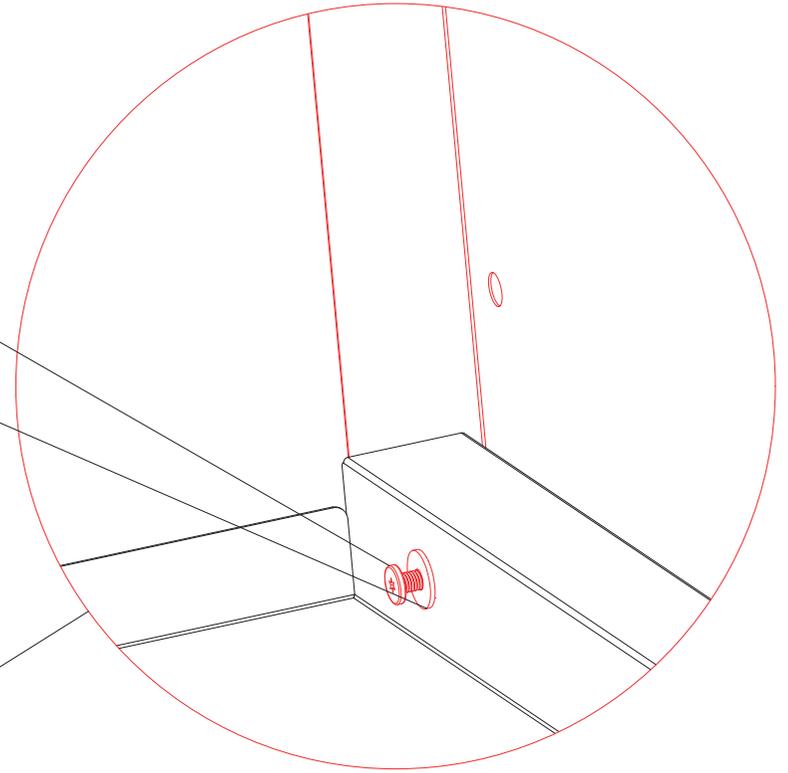




# STEP 4

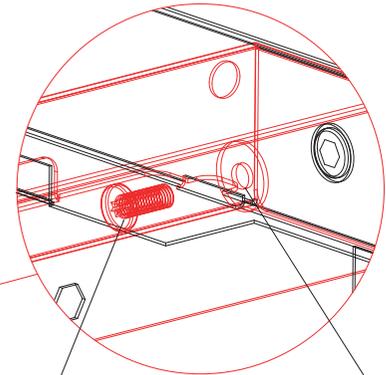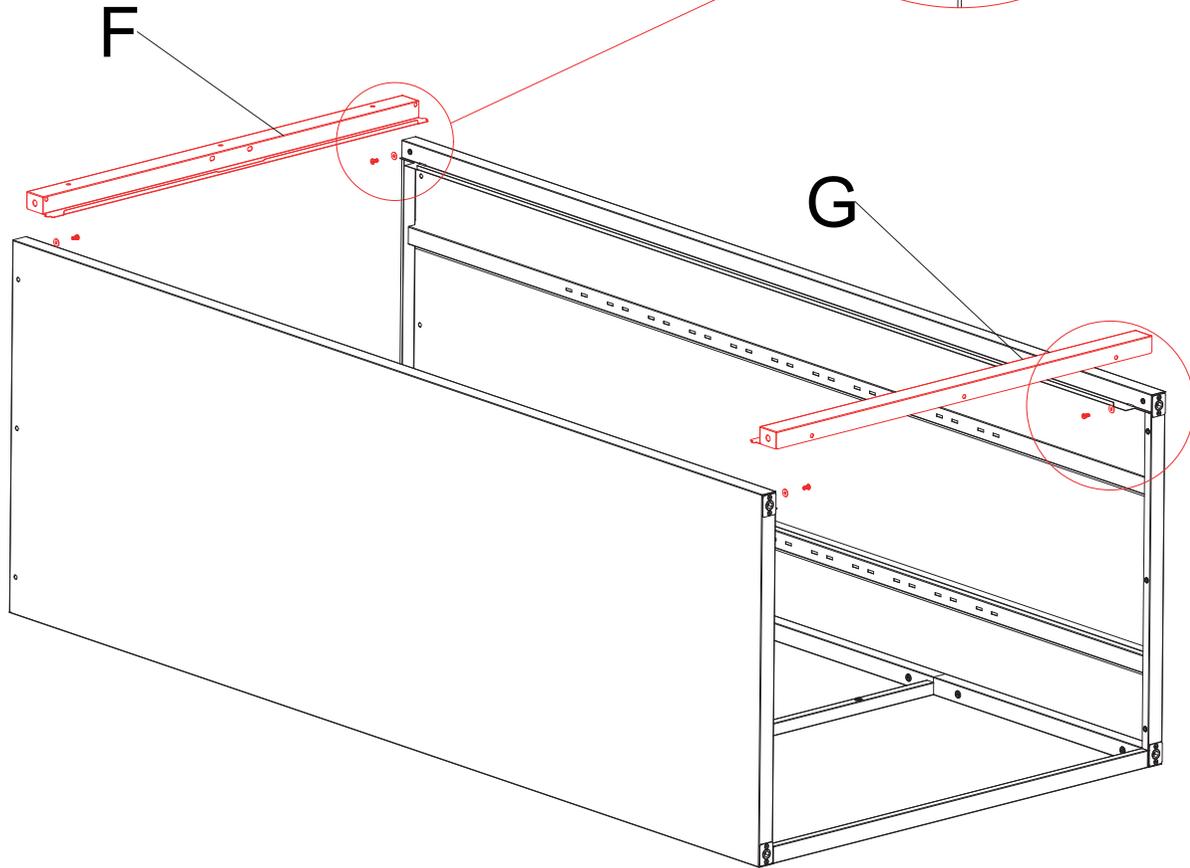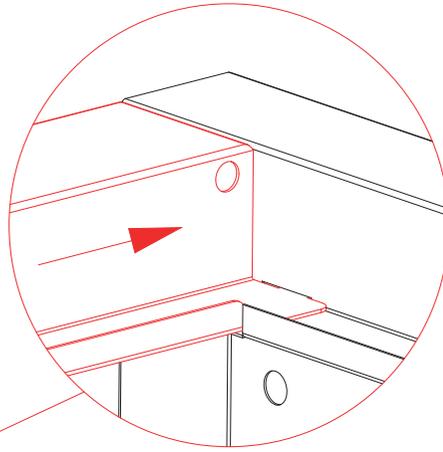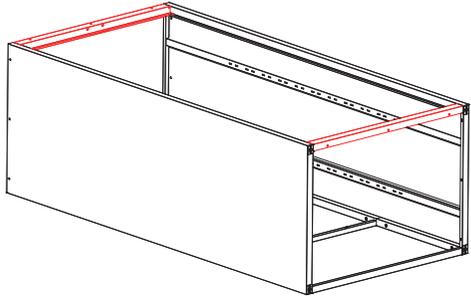

Qx4

Rx4

# STEP 5

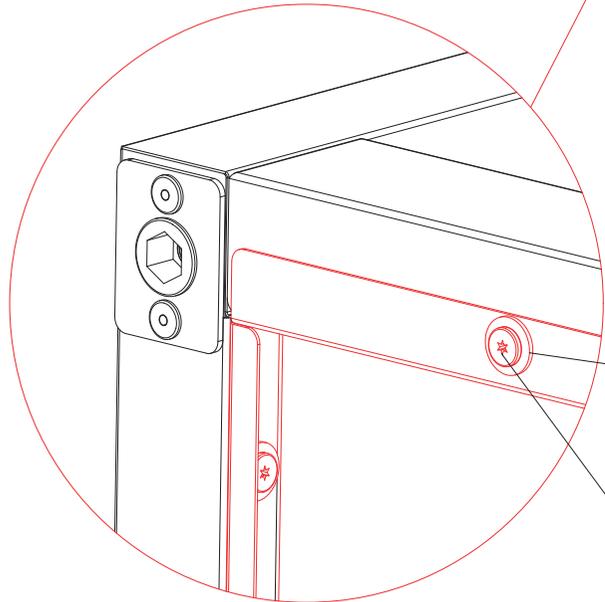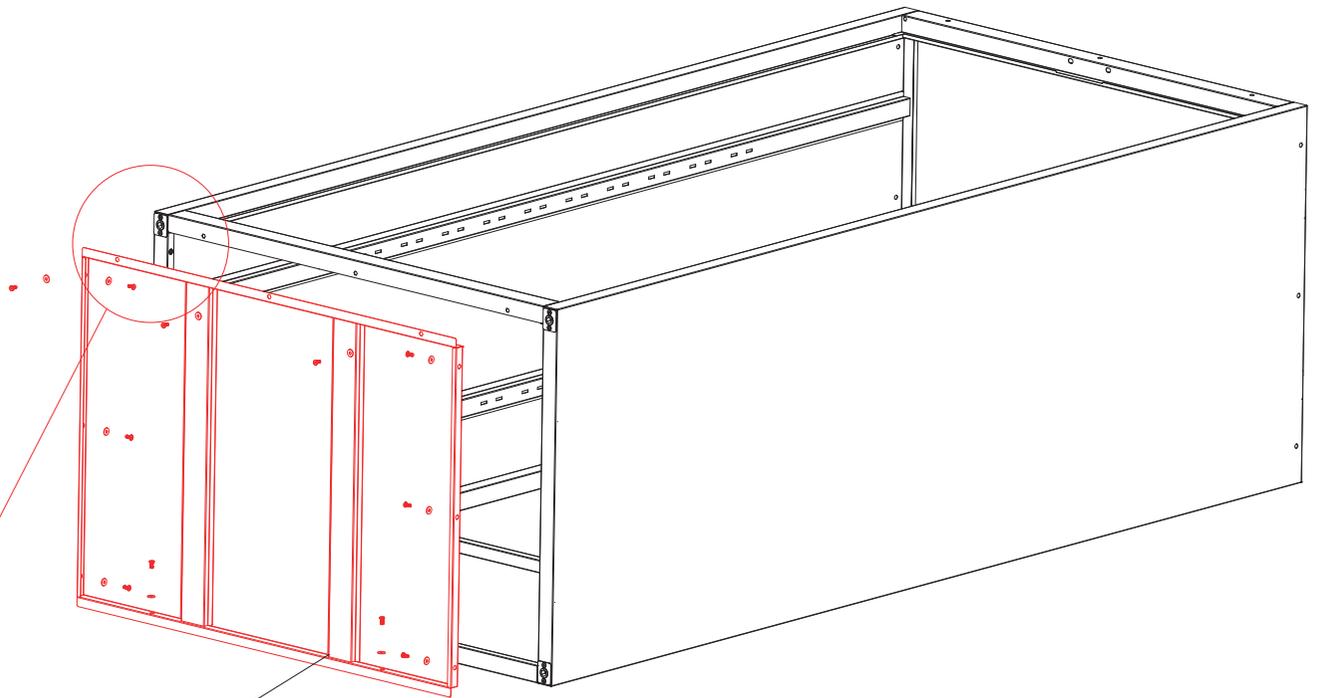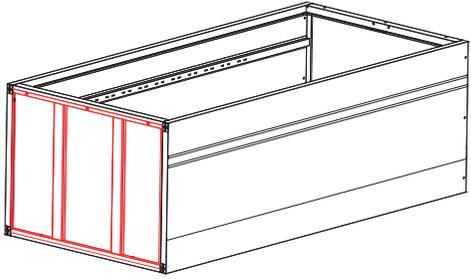


H




Rx11

Qx11

# STEP 6

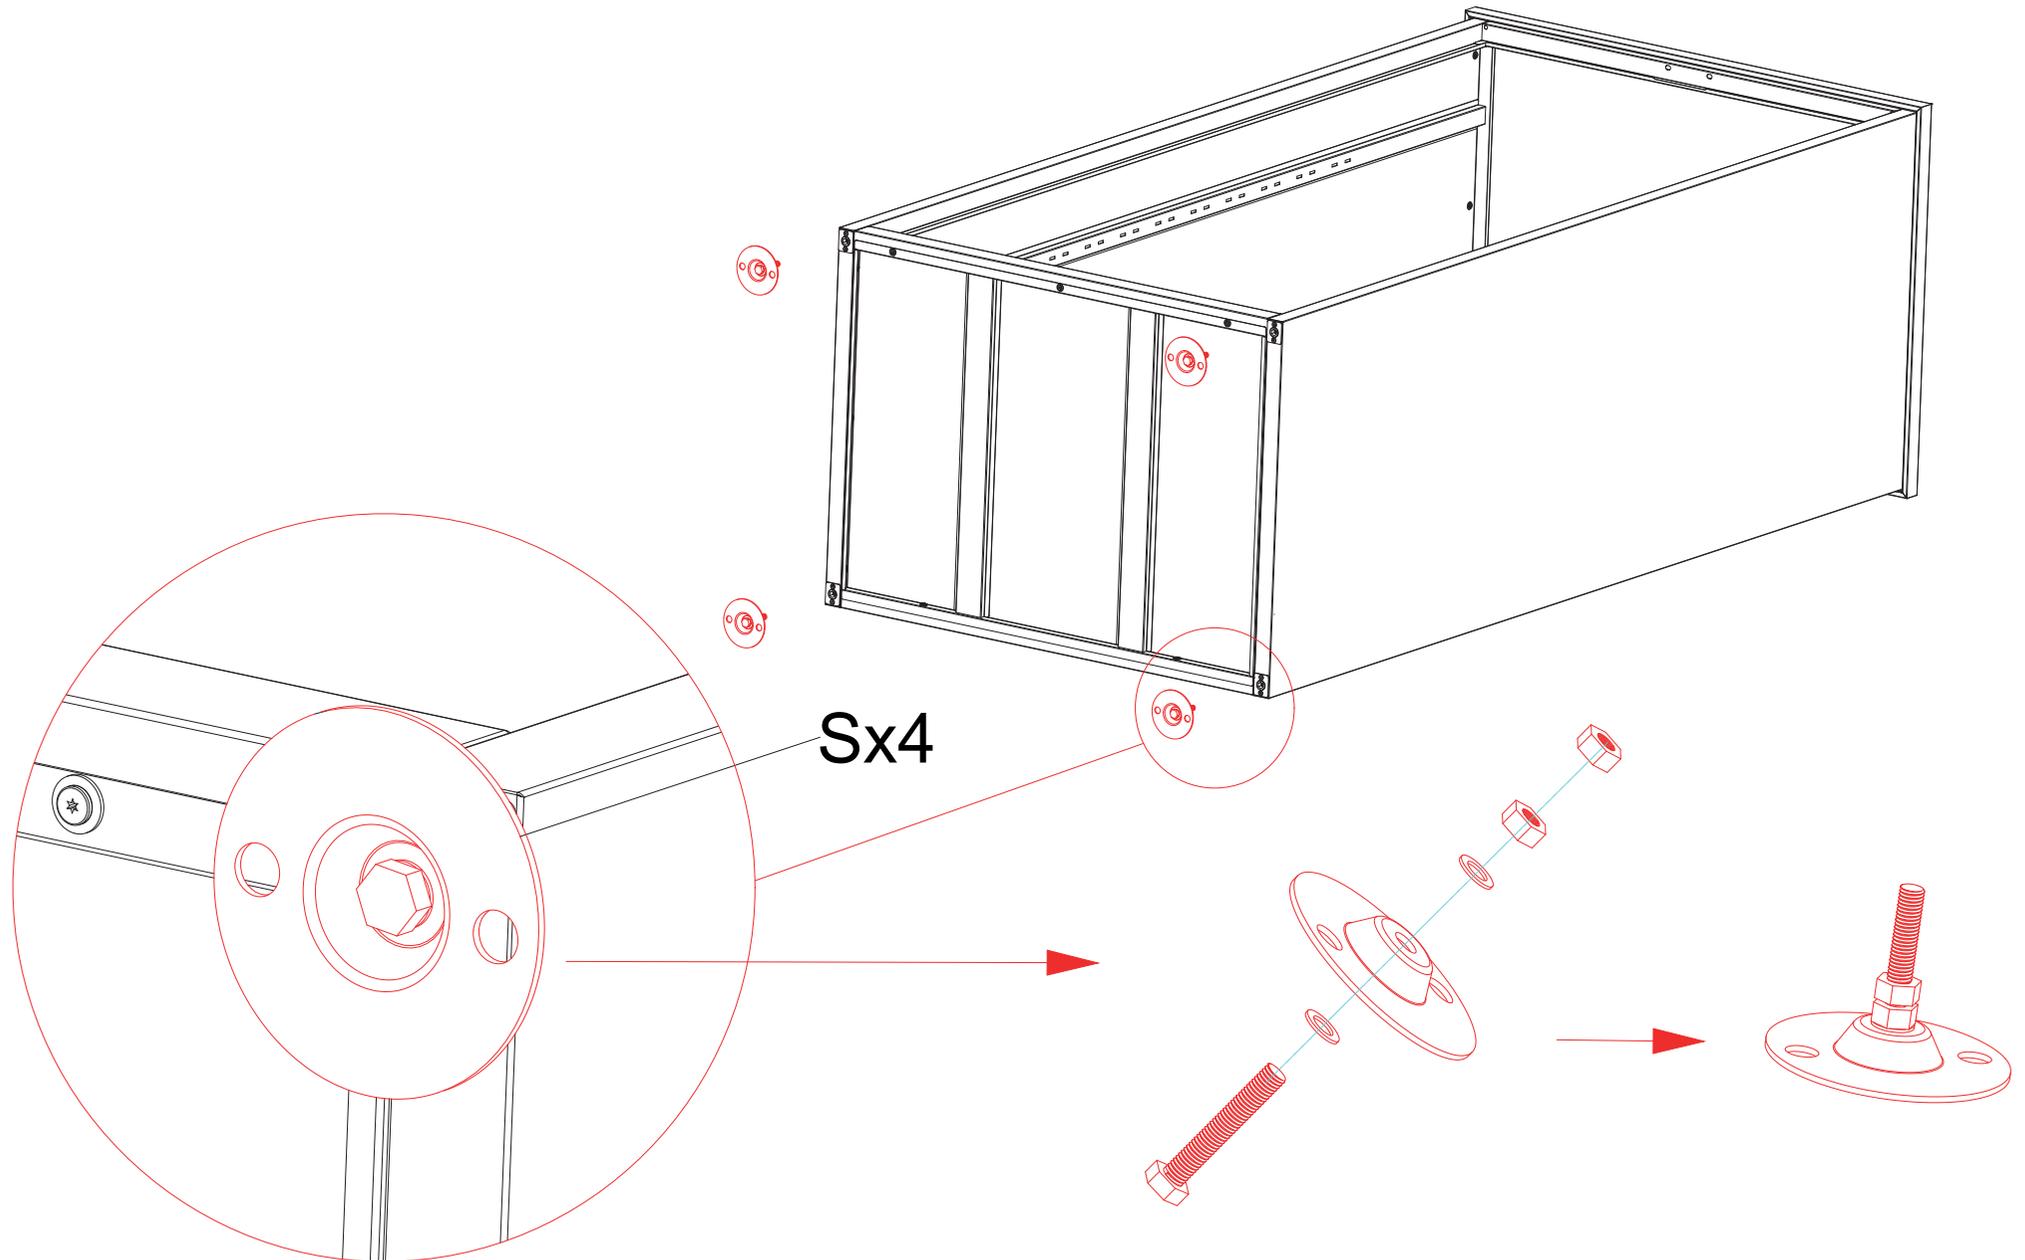


# STEP 7

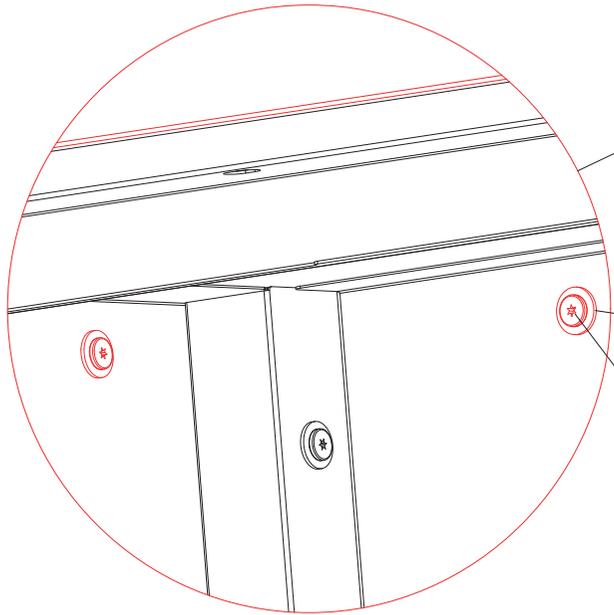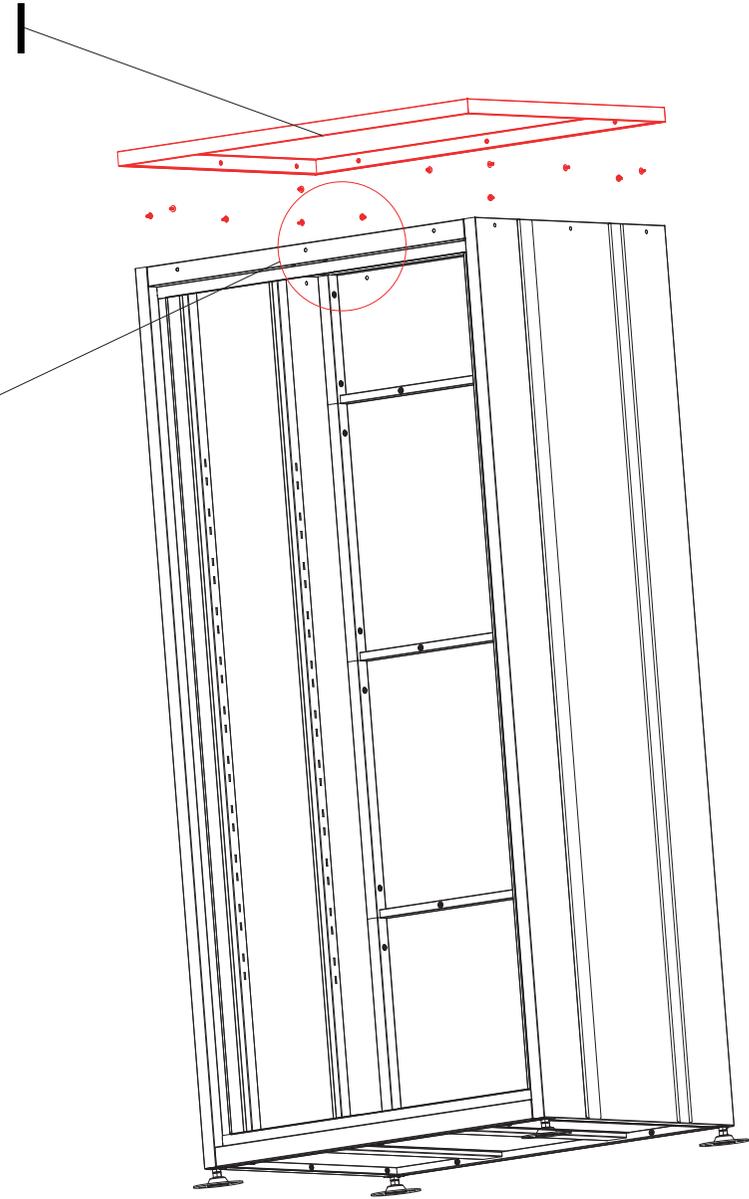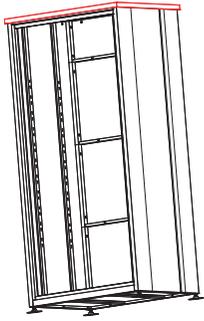


Rx12

Qx12


# STEP 8

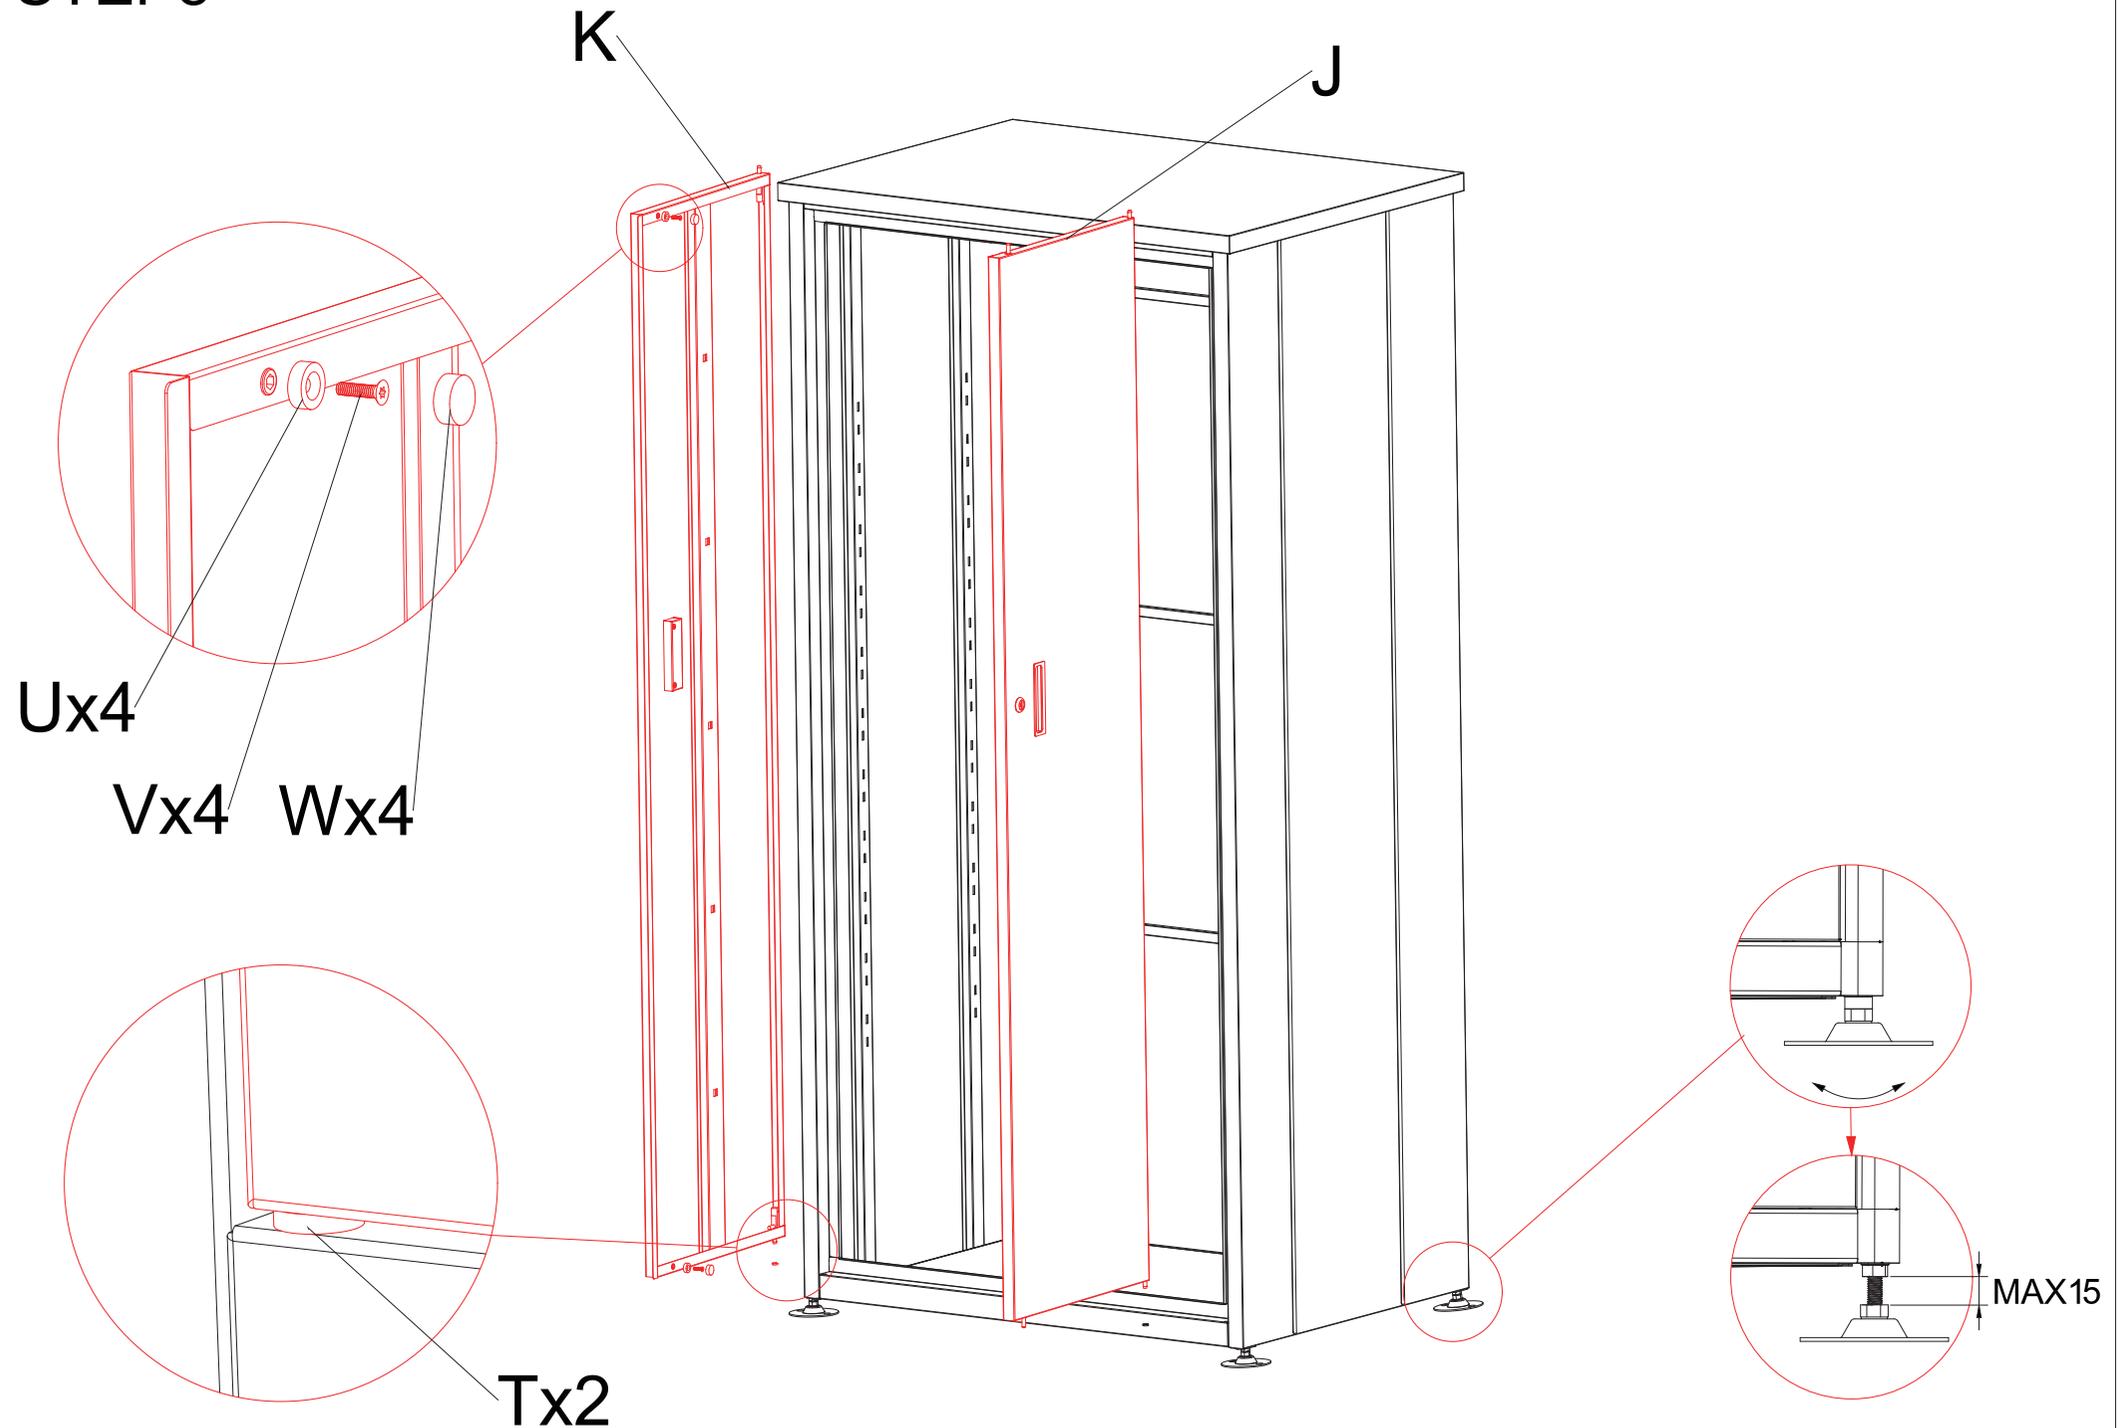


# STEP9

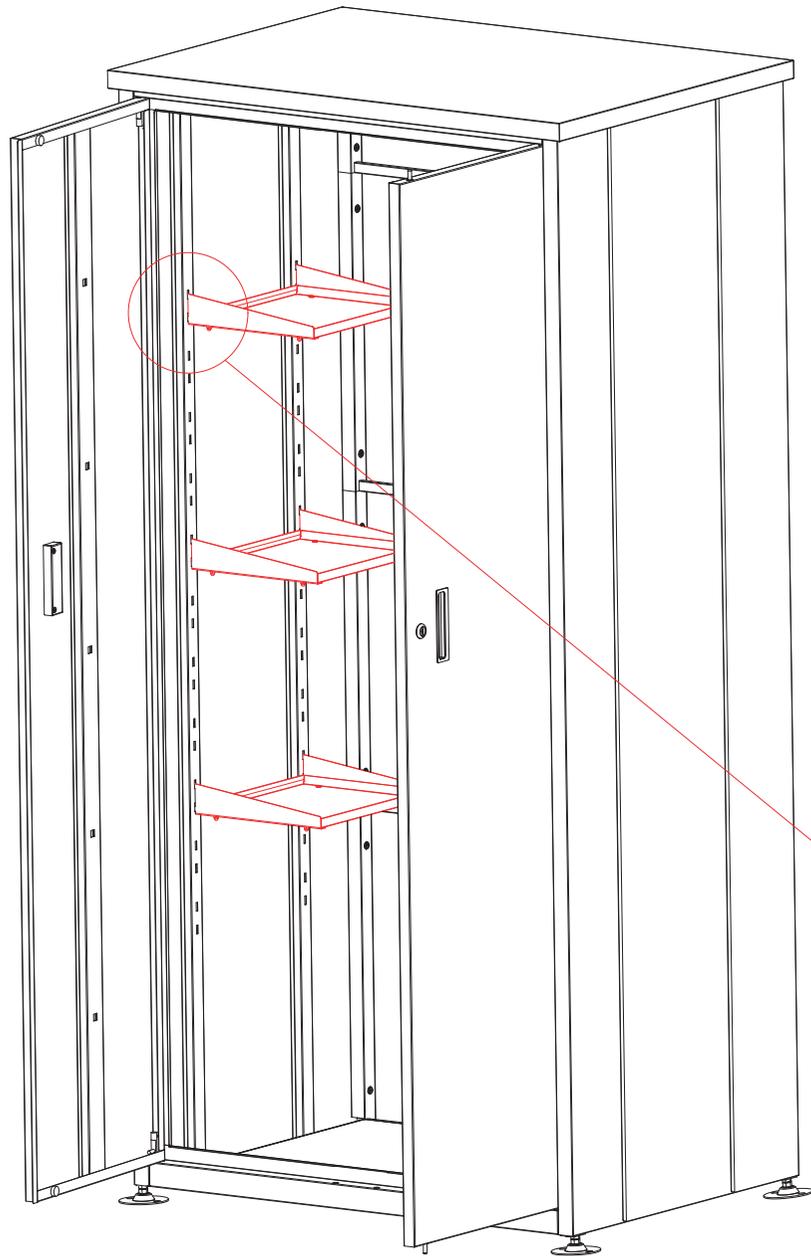


## STEP9-1

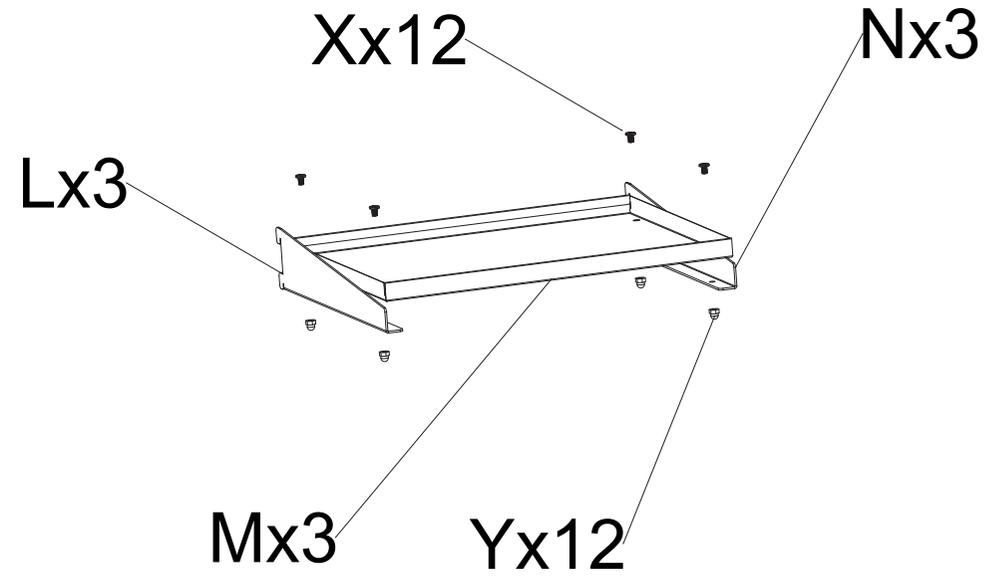

## STEP9-2

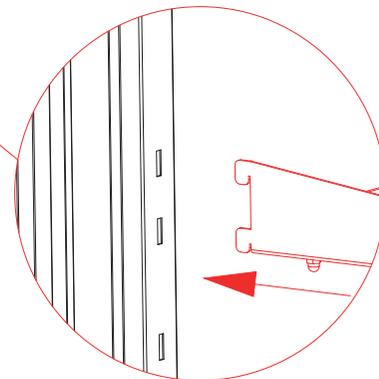




## STEP9-3

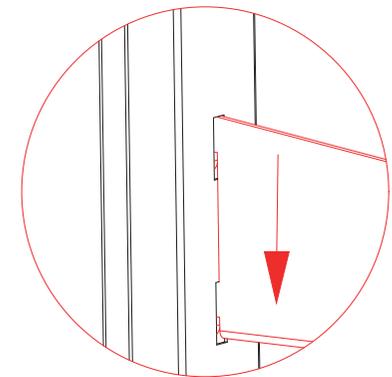


# STEP10

## STEP10-1

## STEP10-2

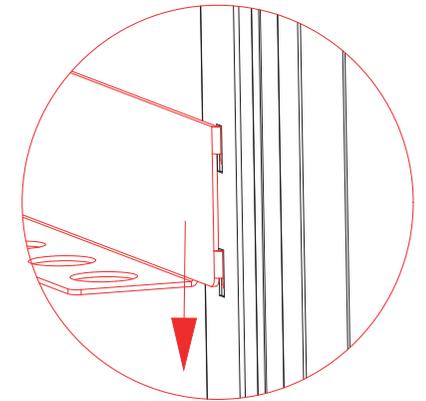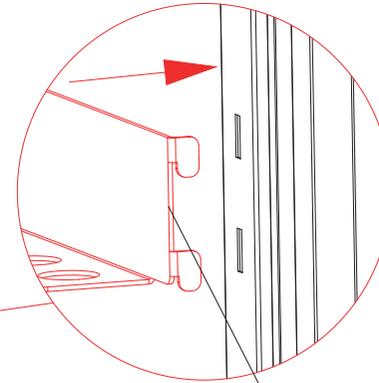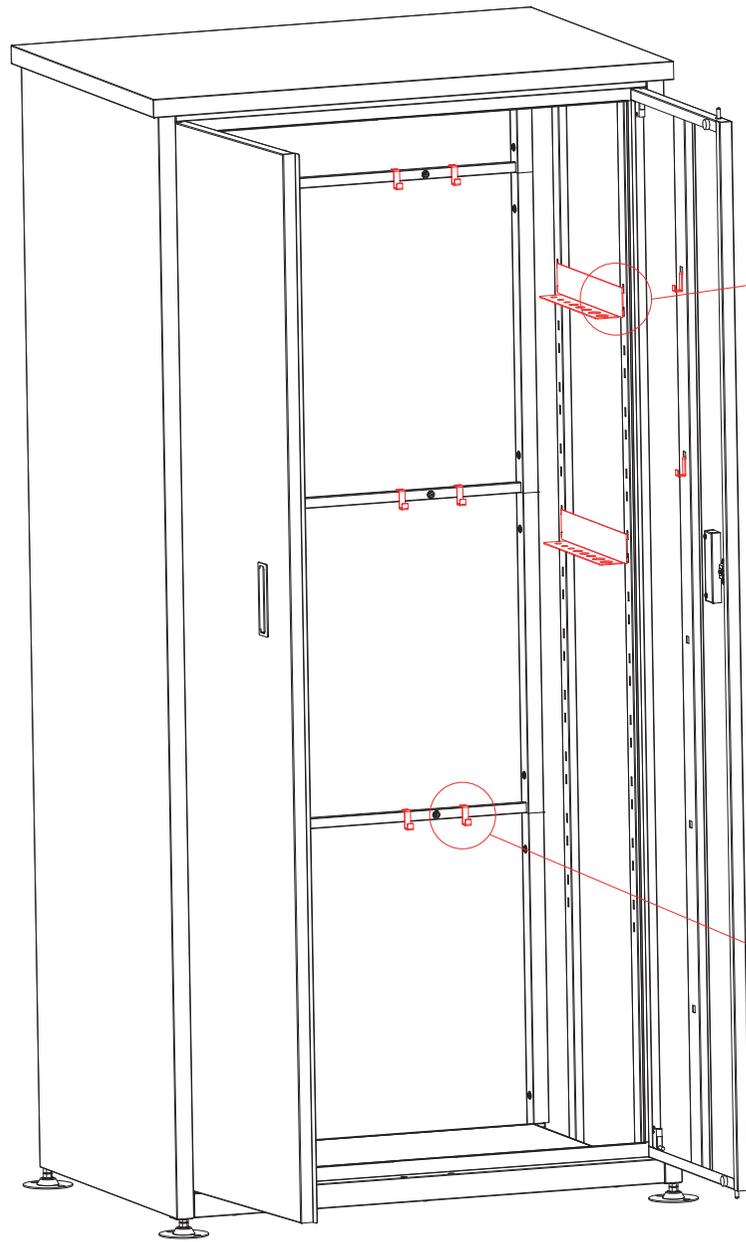


Ox2

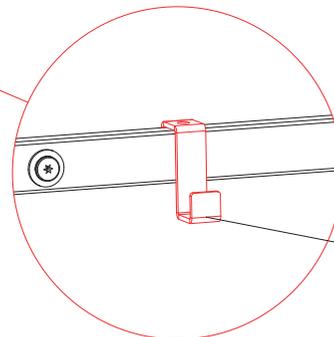

Px10

# STEP 11



## Fix to the ground

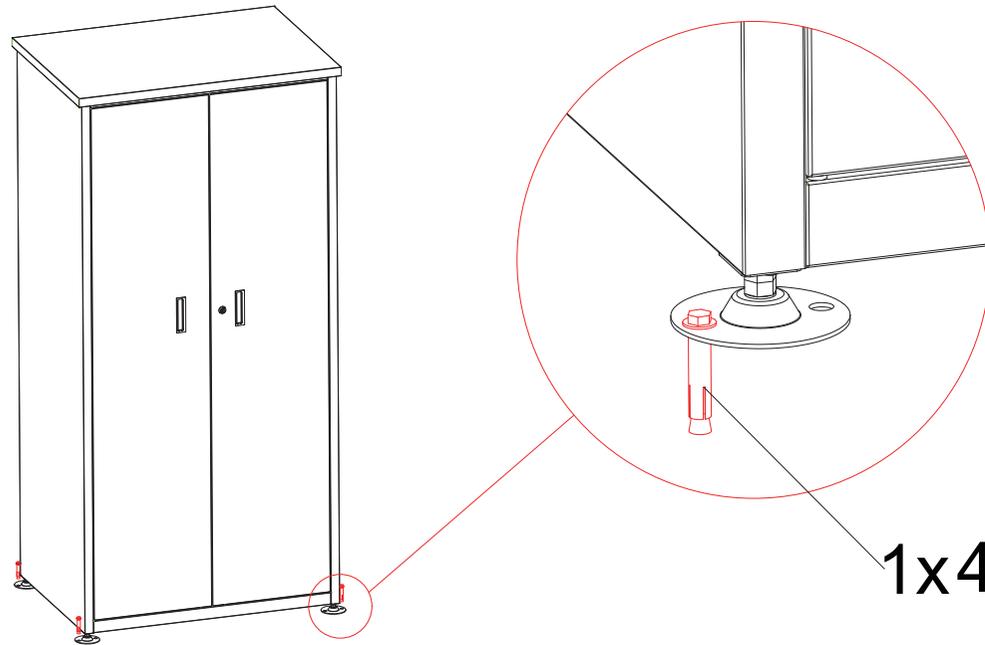

After placing the toolbox in the appropriate position as needed, adjust the adjustable feet at the bottom until the left and right doors remain in a horizontal position. Then, use a  $\varnothing 10\text{MM}$  drill bit to drill installation holes on the ground (drilling depth > 60mm).


## Fix to the wall

2x2

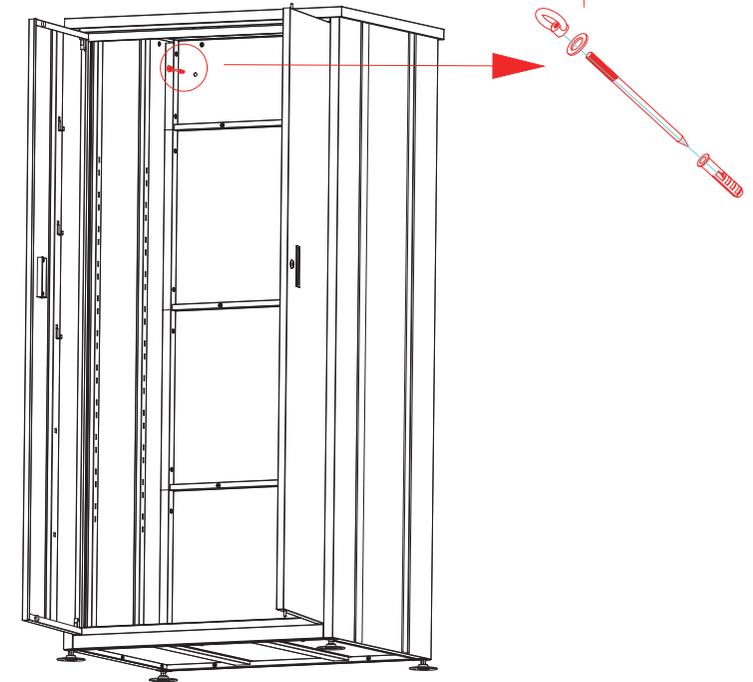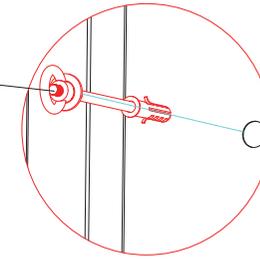

After placing the toolbox in the appropriate position as needed, adjust the adjustable feet at the bottom until the left and right doors remain in a horizontal position. Then, use a  $\varnothing 6\text{MM}$  drill bit to drill installation holes at the back (drilling depth > 60mm).

# DIY Options

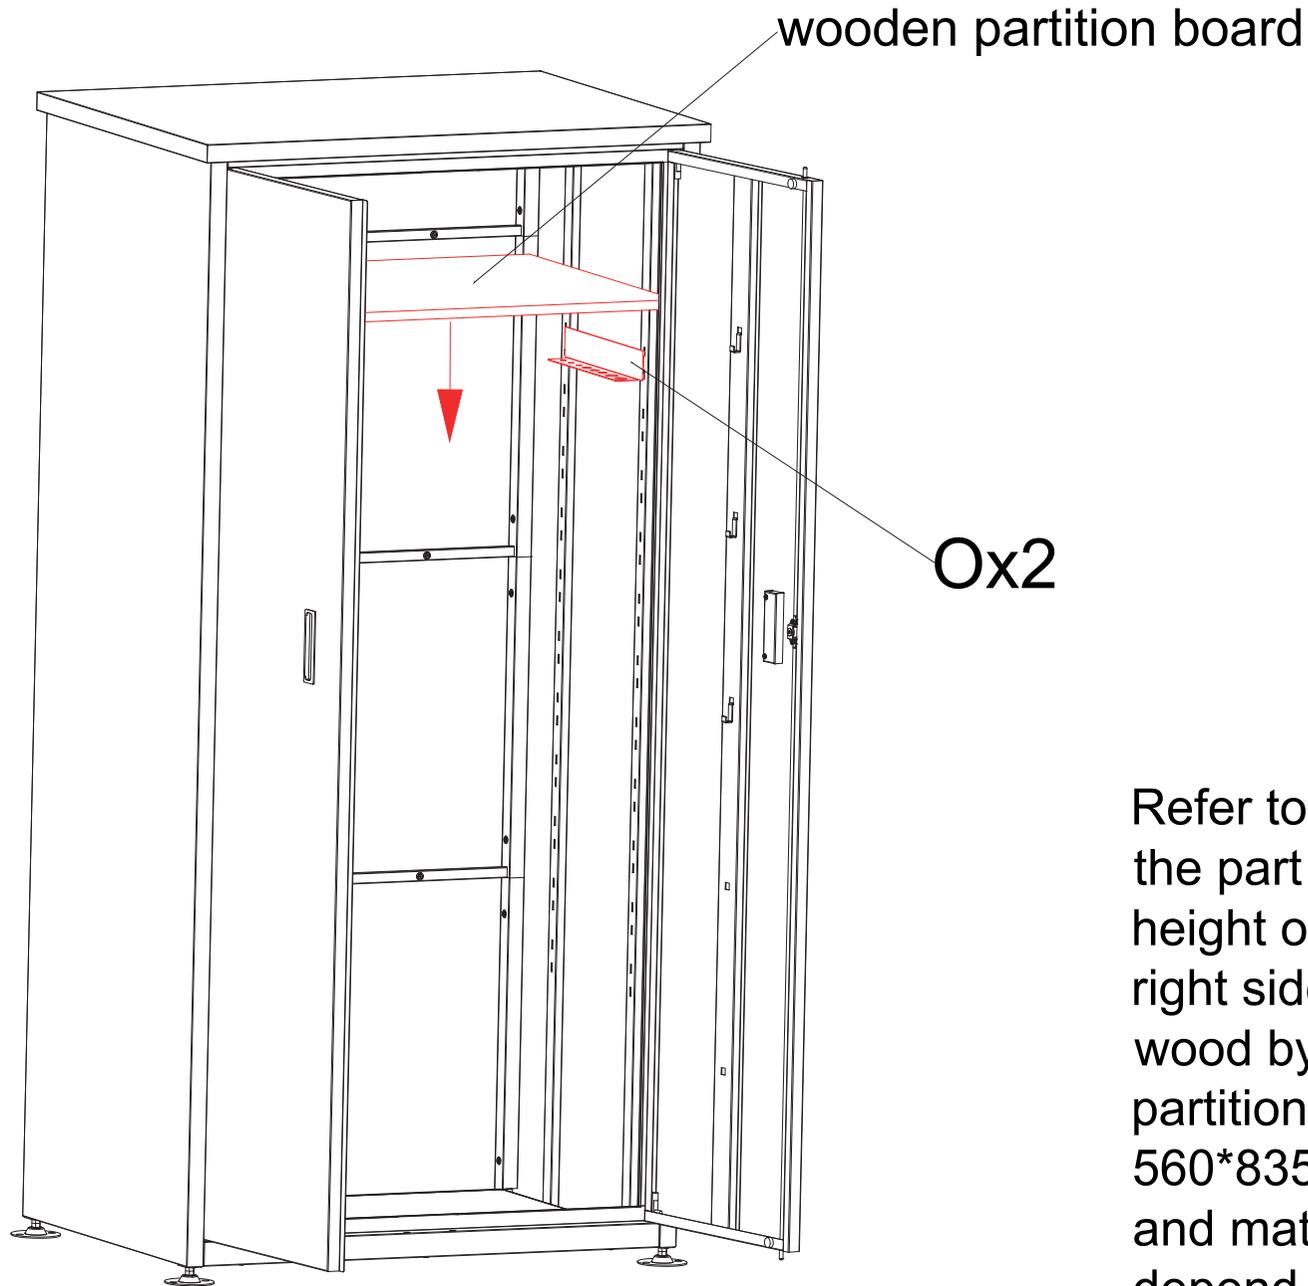

Refer to Step 10 and place the part "O" at the same height on both the left and right sides. You can purchase wood by yourself as the partition board. Wood size: 560\*835mm. The thickness and material of the wood depend on individual needs.