

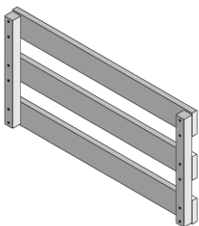

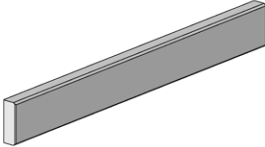





Montageanleitung für Ofenschutz

Art.-Nr.: 500.0124.72.00

Pos	Bild	Abmessung (mm)	Anzahl (Stück)
①	B537.03.0014 	46,5/615/330	1
②	G537.03.0003 	28/28/320	1
③	G537.03.0004 	18,5/70/455	3
M1	K001.5040.0004 	4,0 x 50	4
M2	K001.4040.0004 	4,0 x 40	12







- Zuluftöffnung



- erst vorbohren, dann schrauben




	M1	4,0 x 50
	M2	4,0 x 40

WEKA KOMPAKT O6,0 / O8,0

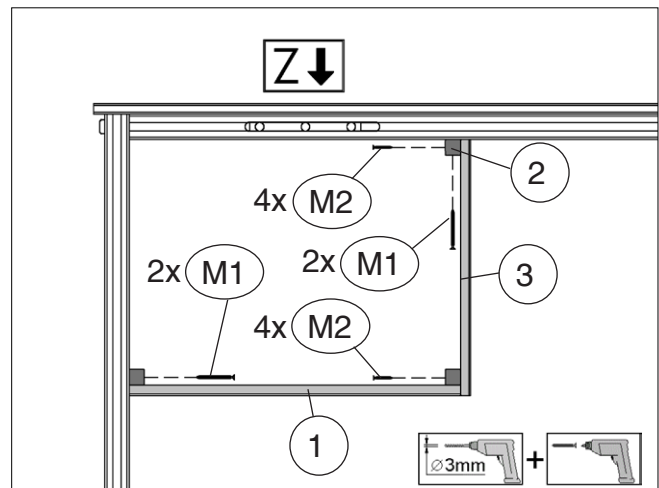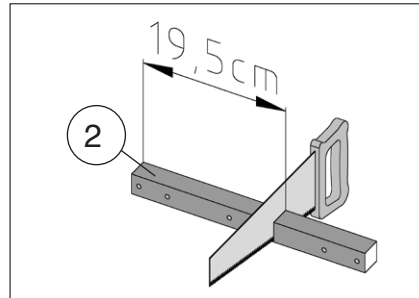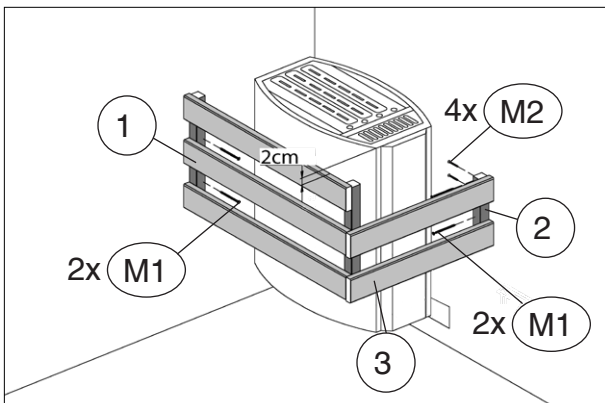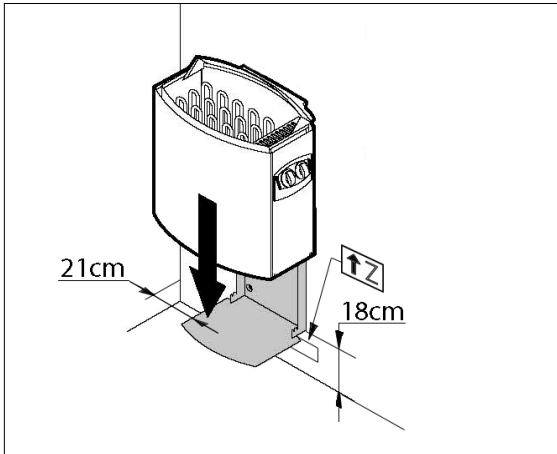

	M1	4,0 x 50
	M2	4,0 x 40

WEKA CLASSIK OS / BioAktiv

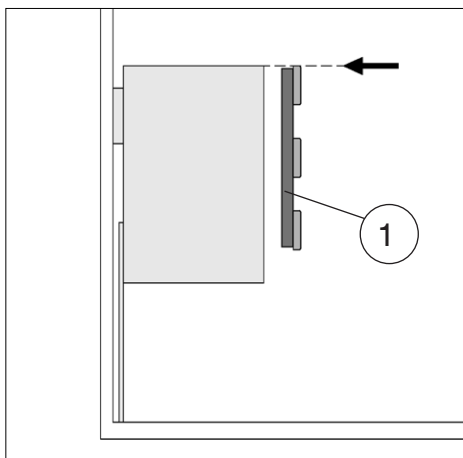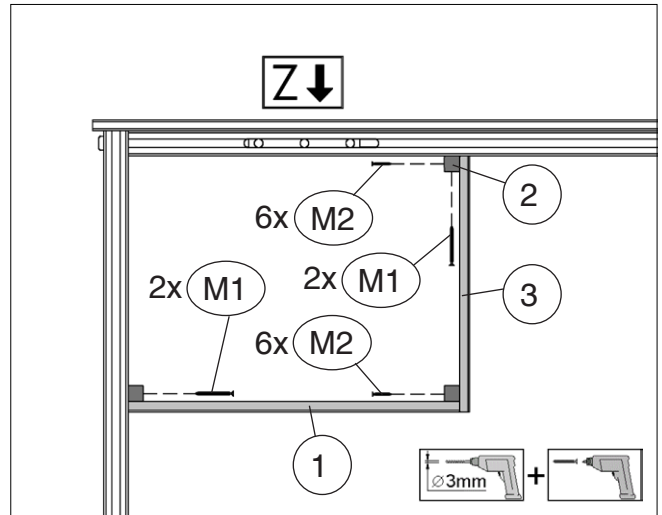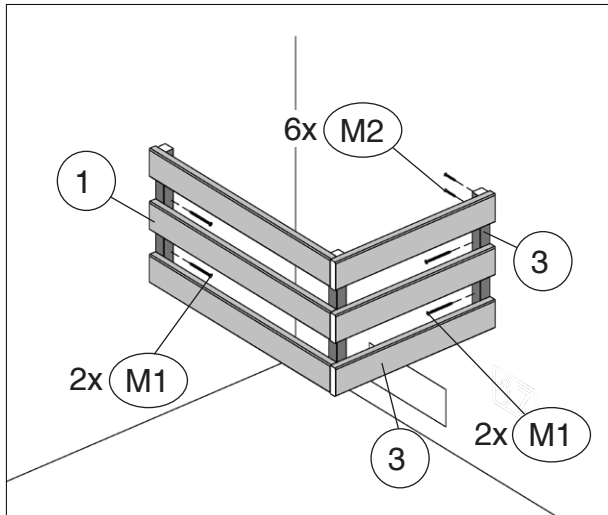

www.weka-holzbau.com



WEKA Holzbau GmbH

Johannesstr. 16, 17034 Neubrandenburg

Tel.: +49 (0)395 42908-0

Fax: +49 (0)395 42908-83

Mail: info@weka-holzbau.com

Web: www.weka-holzbau.com

MA Art.-Nr.: 800.0286.23.09