


**Gary Metall-Terrassenbox 220/
Gary Metal Terrace Box 220**

Art.-Nr: 7010009

weka




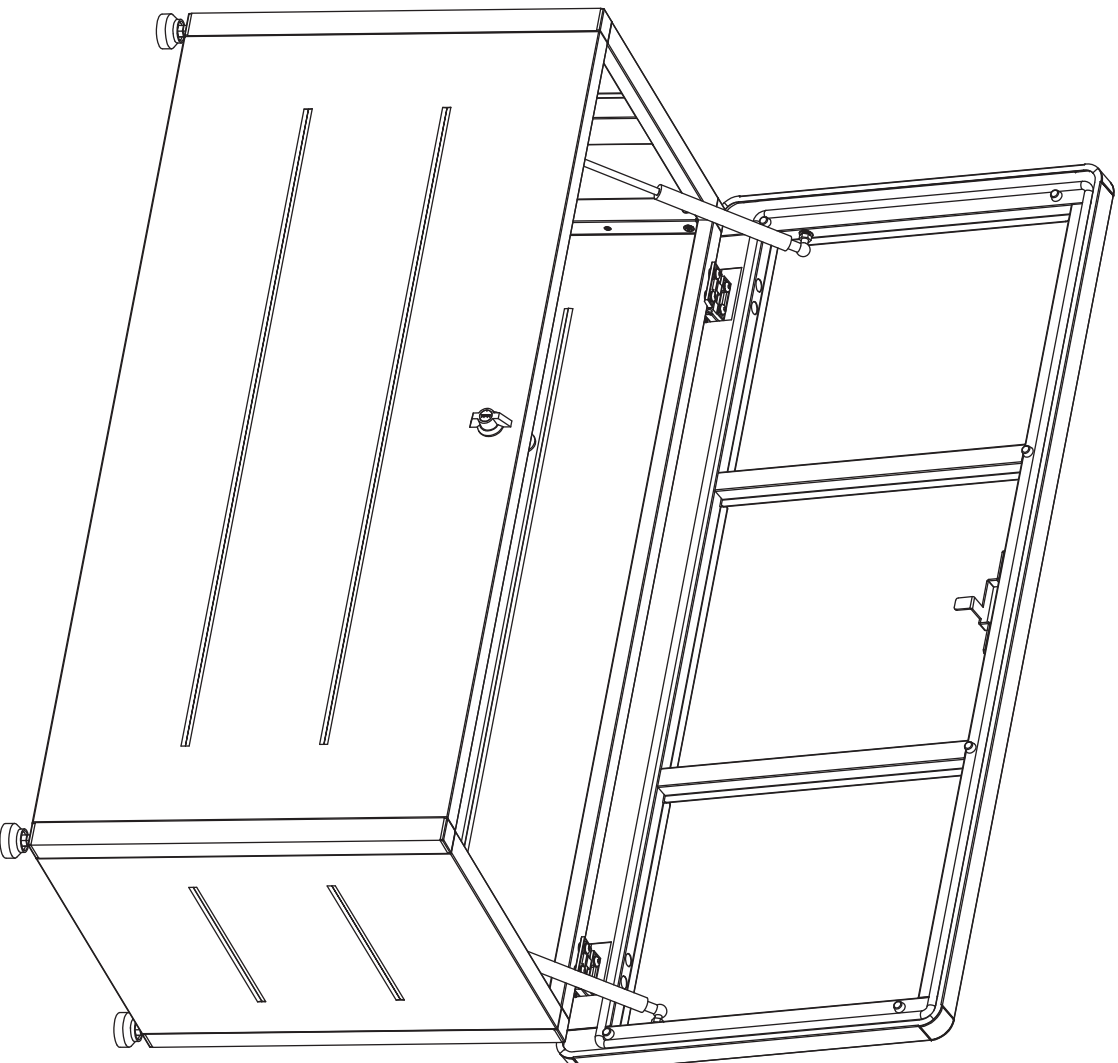


**Montageanleitung/
Assembly instructions**

















**weka Holzbau GmbH
Postfach 20 02 04
D-17013 Neubrandenburg**

www.weka-holzbau.com


**Sie erreichen uns/ You can reach us:
Mo - Fr 08:30 - 18:00 Uhr
+49 (0)395/42908-0**

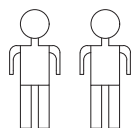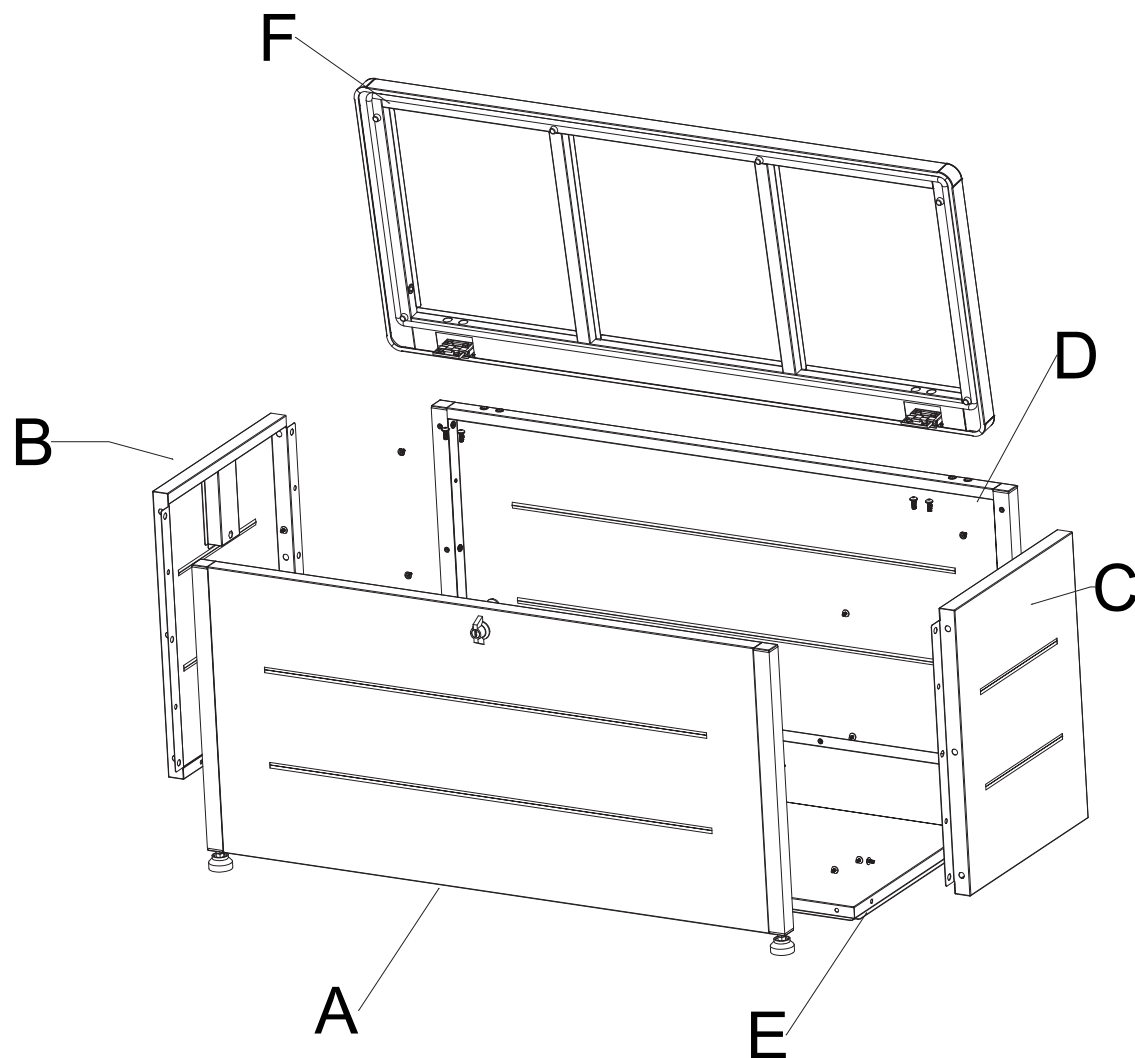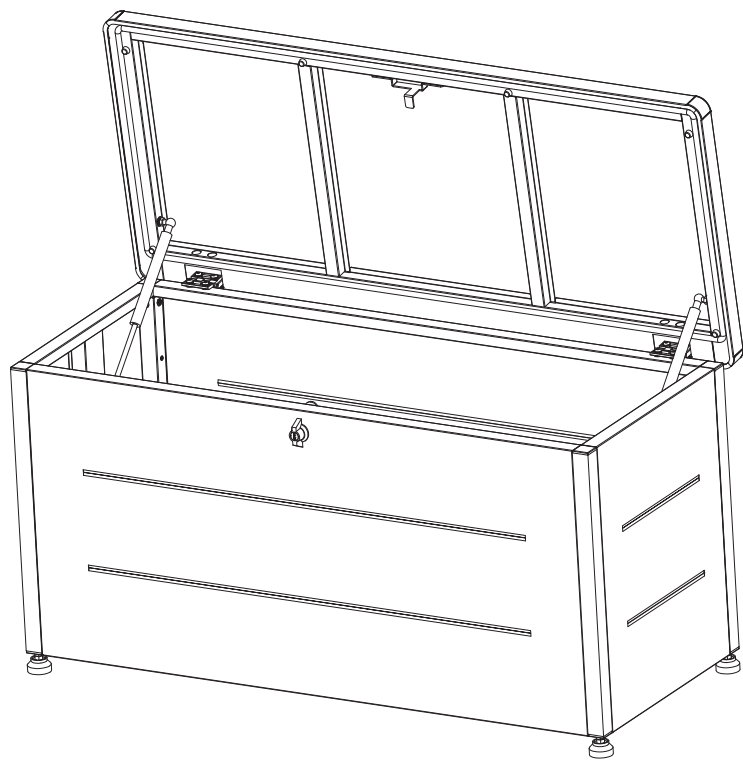


30Min

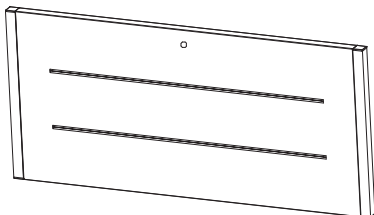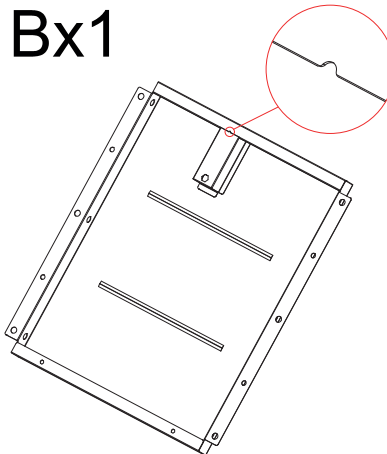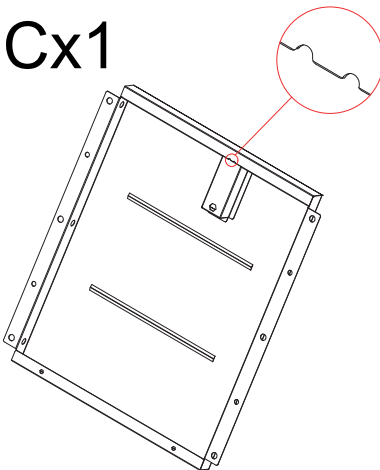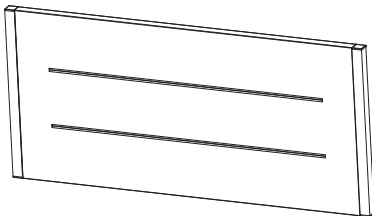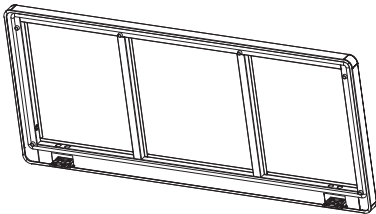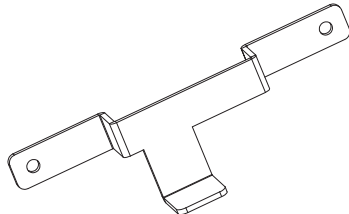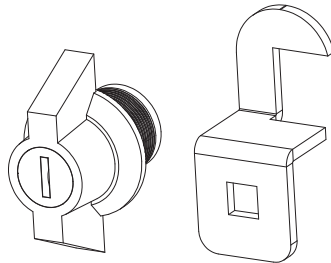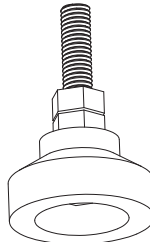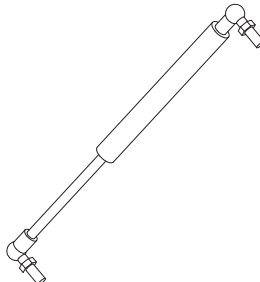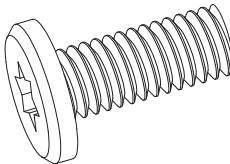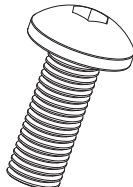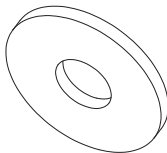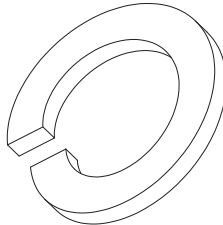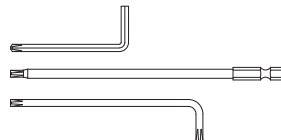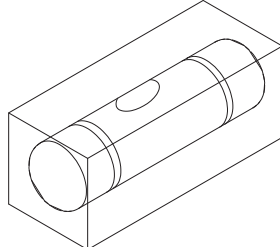Ax1 	Bx1 	Cx1 	Dx1 	Ex1 	
Fx1 	Gx1 	Hx1 	Ix4 	Jx2 	
Kx38  M4x10mm	Lx4  M6x16mm	Mx38  Ø4xØ12x1mm	Nx4 	Ox1 	Px1 

STEP1

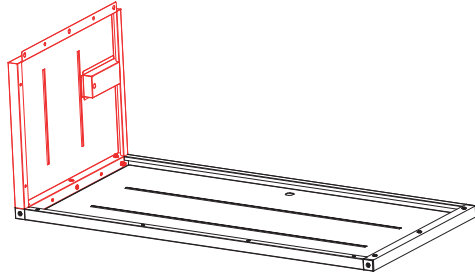




C

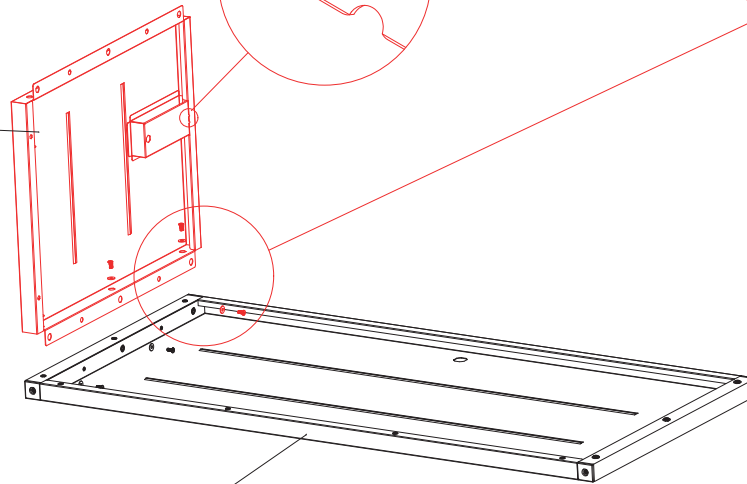


Kx6
Mx6

A


STEP2

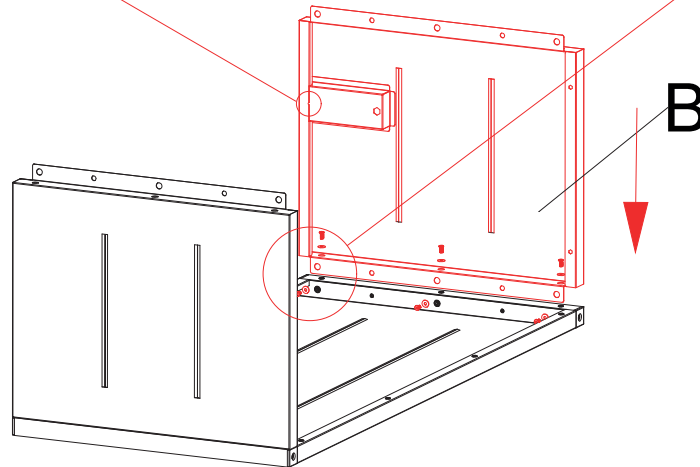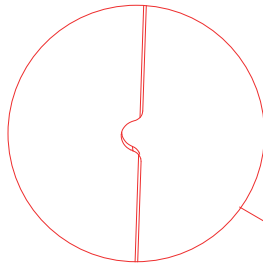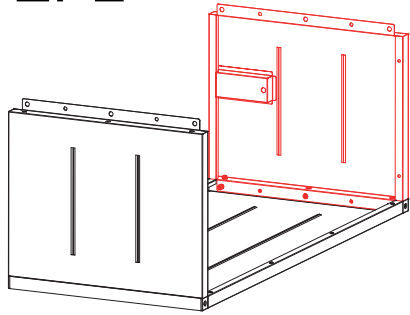




Kx6
Mx6

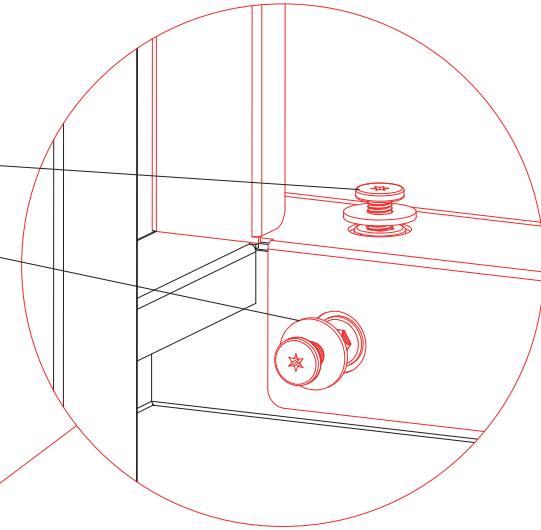

STEP3-1

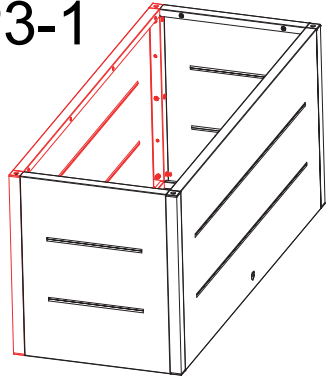


D

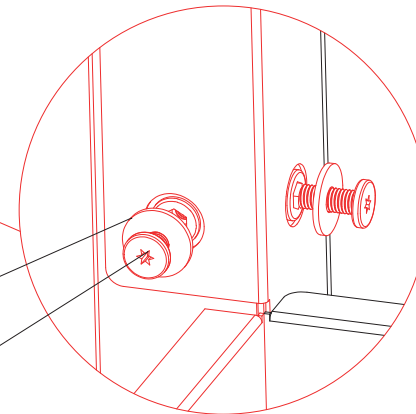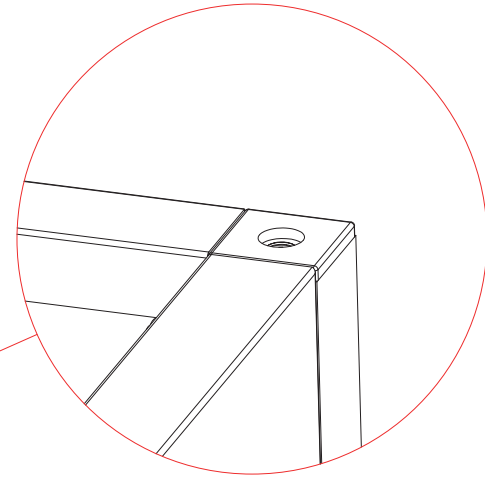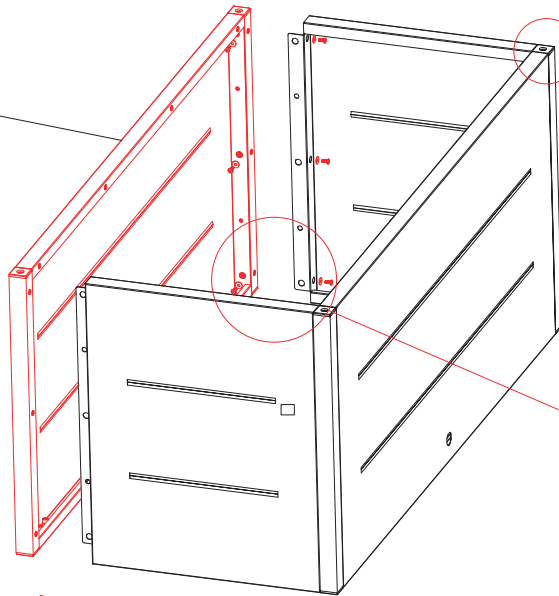

Mx6


Kx6

STEP3-2

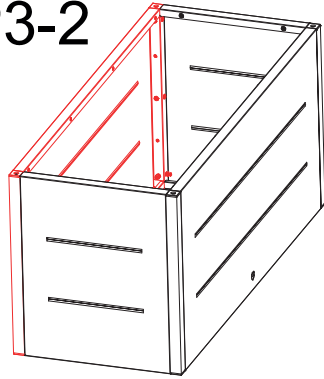


Mx6



Kx6

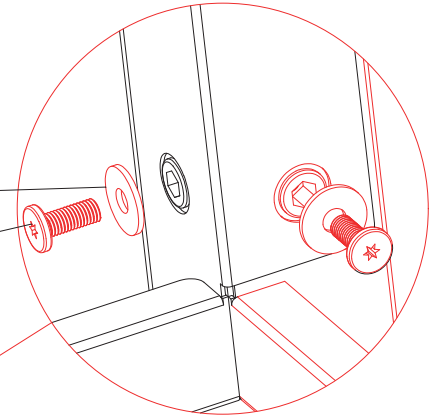


D

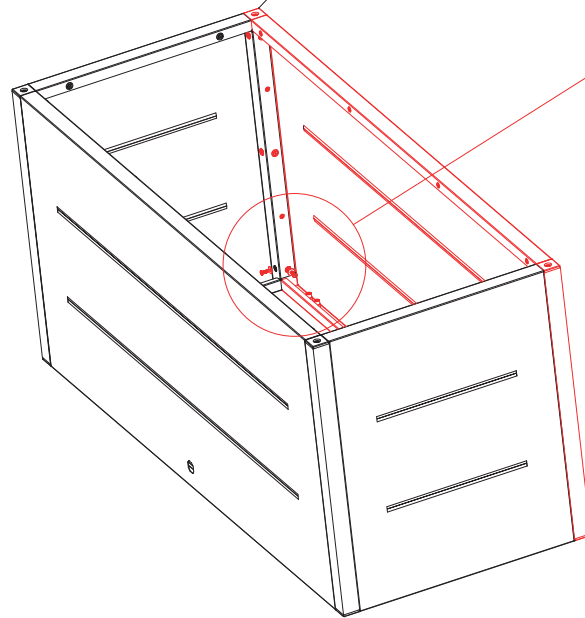



STEP4

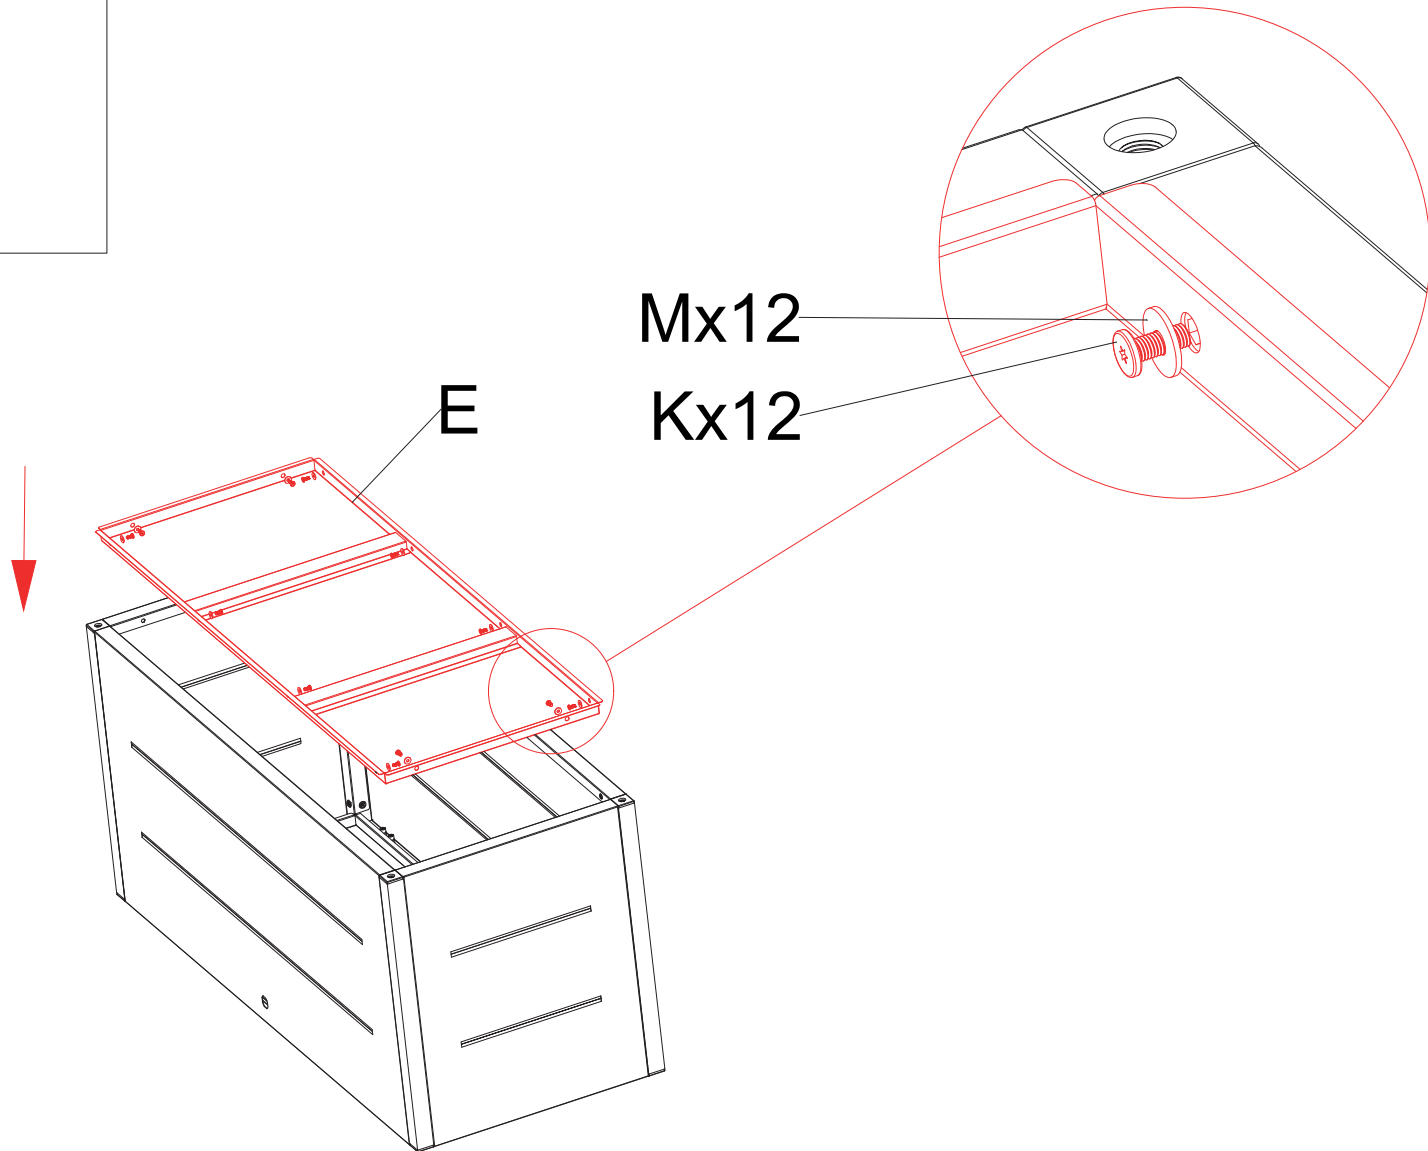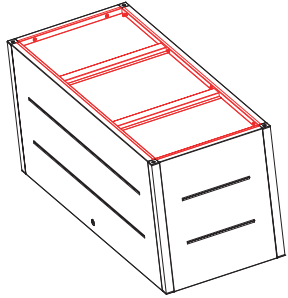


STEP5

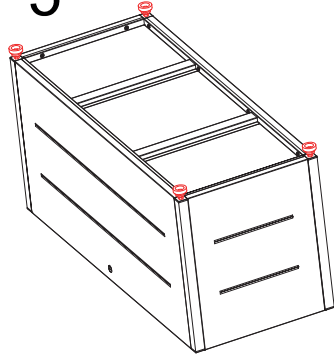


1x4

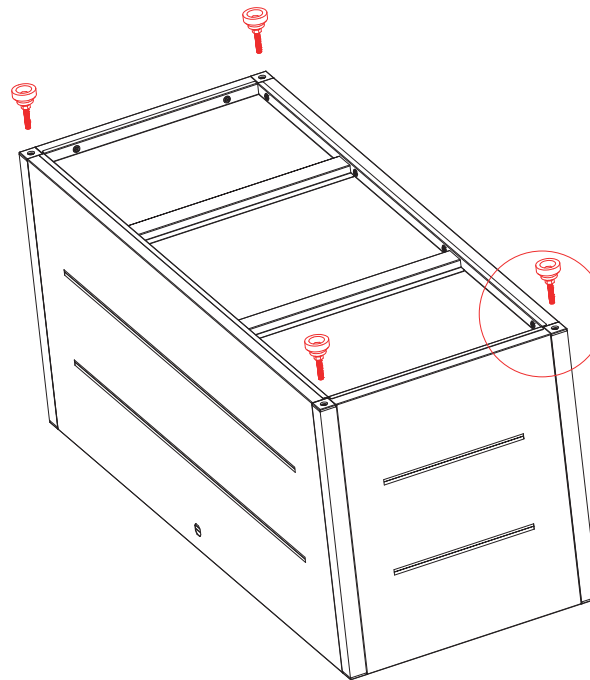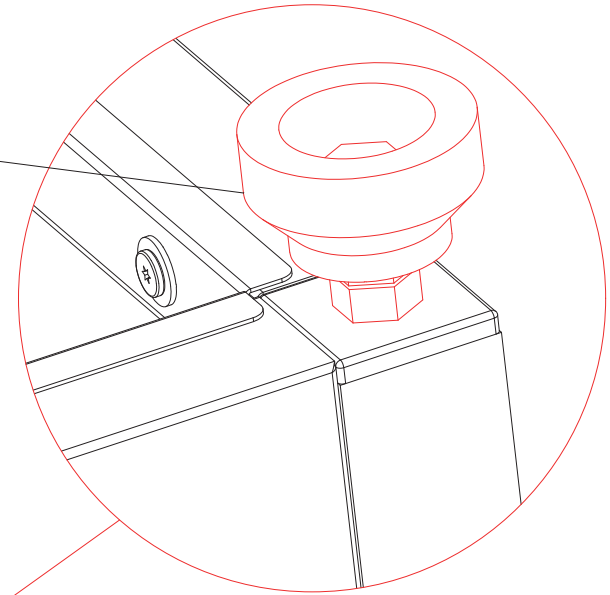


STEP6

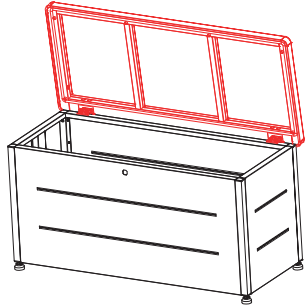


Lx4

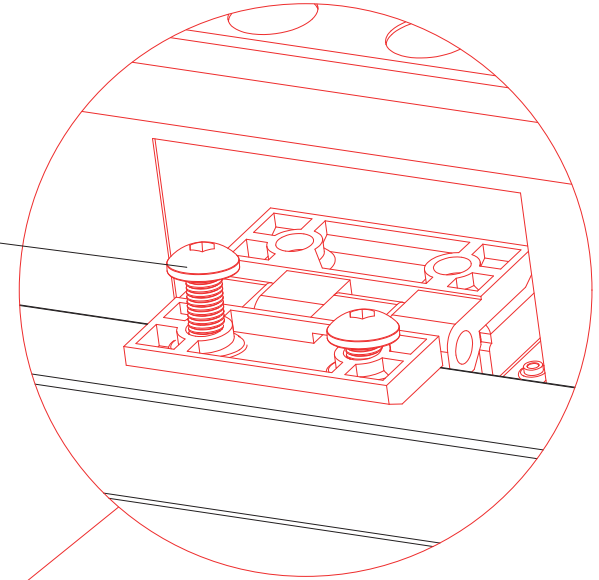


F

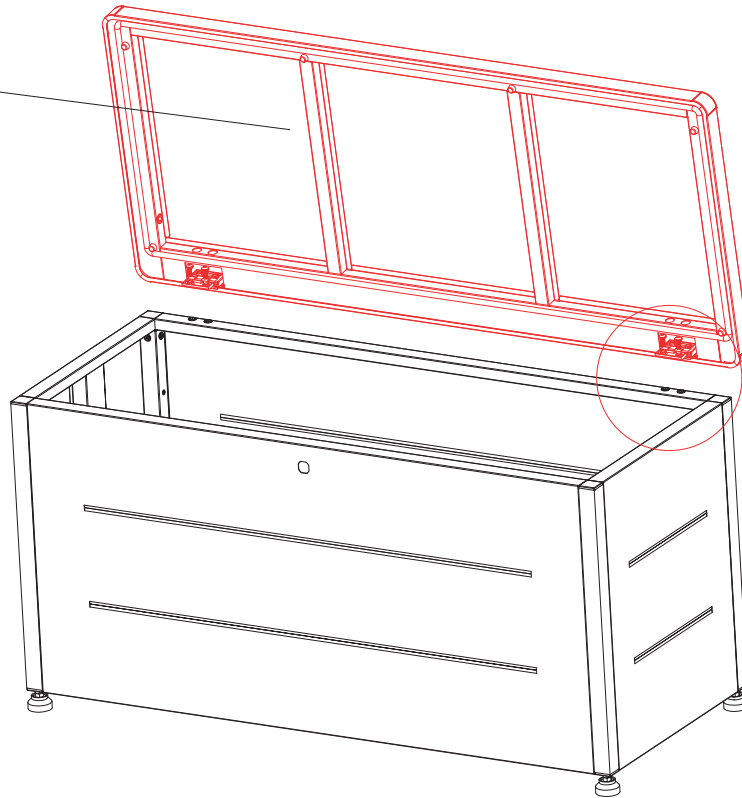


STEP7

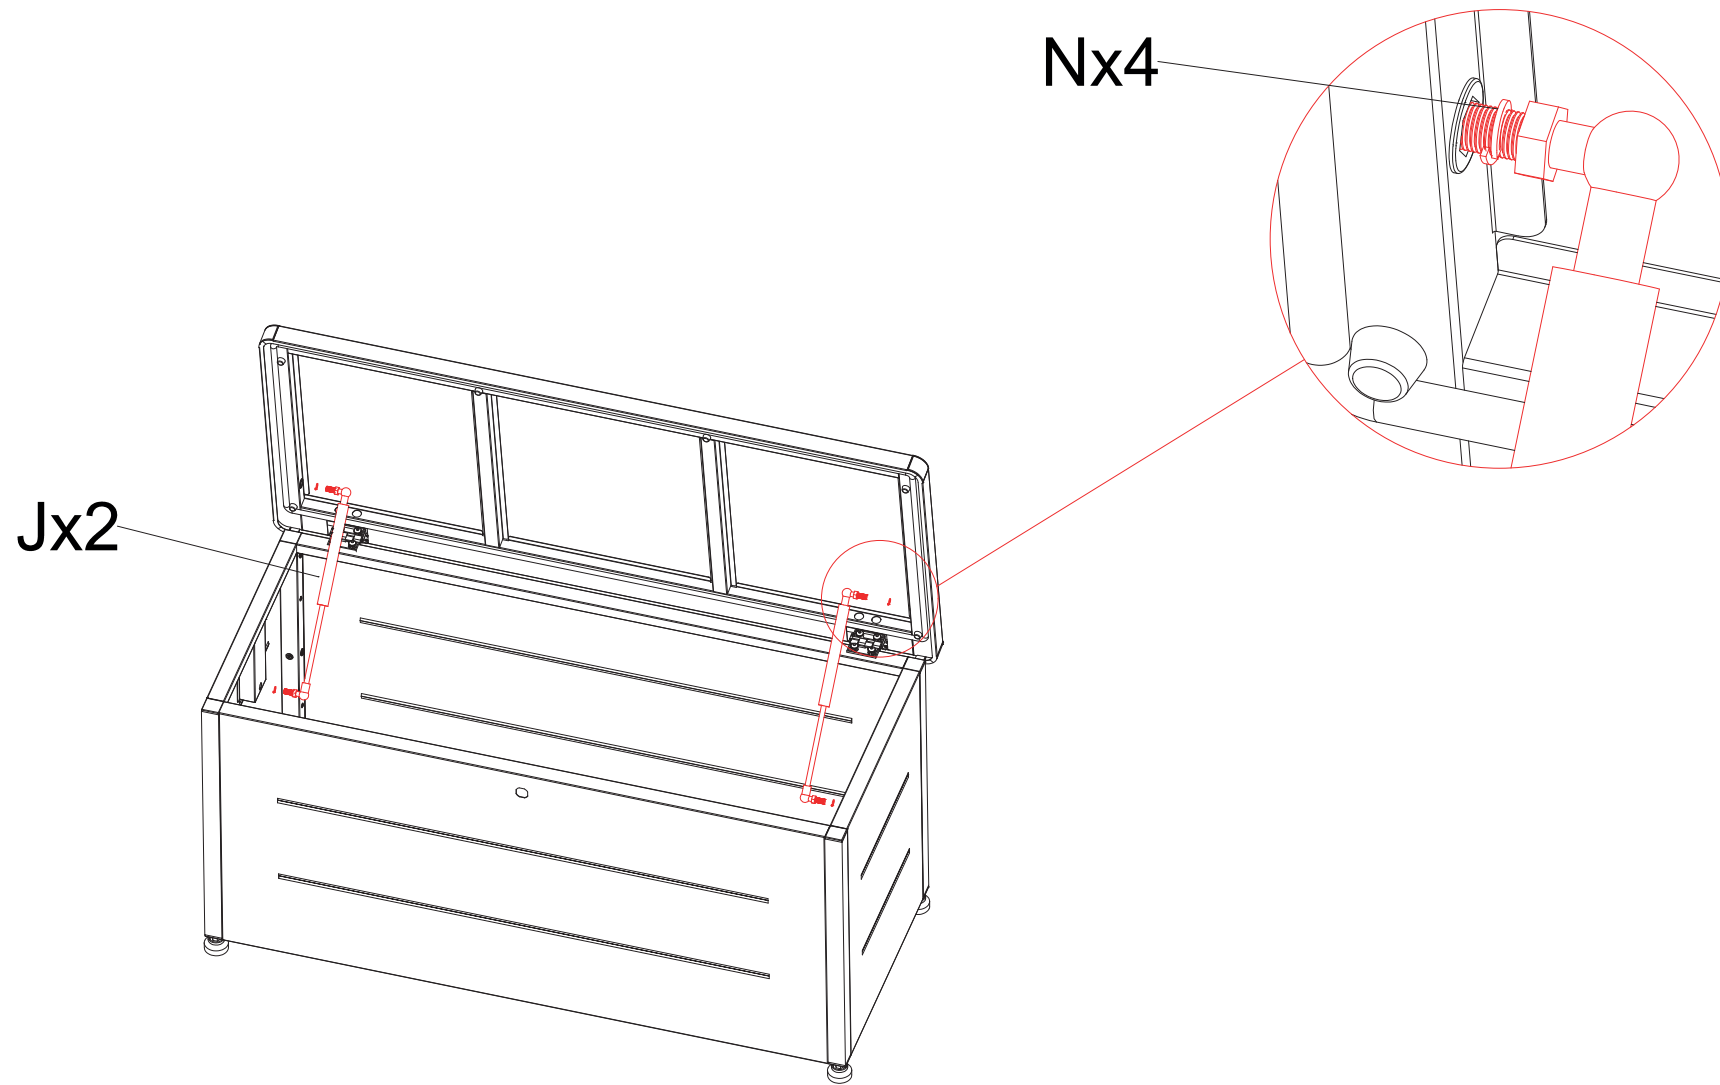

STEP8

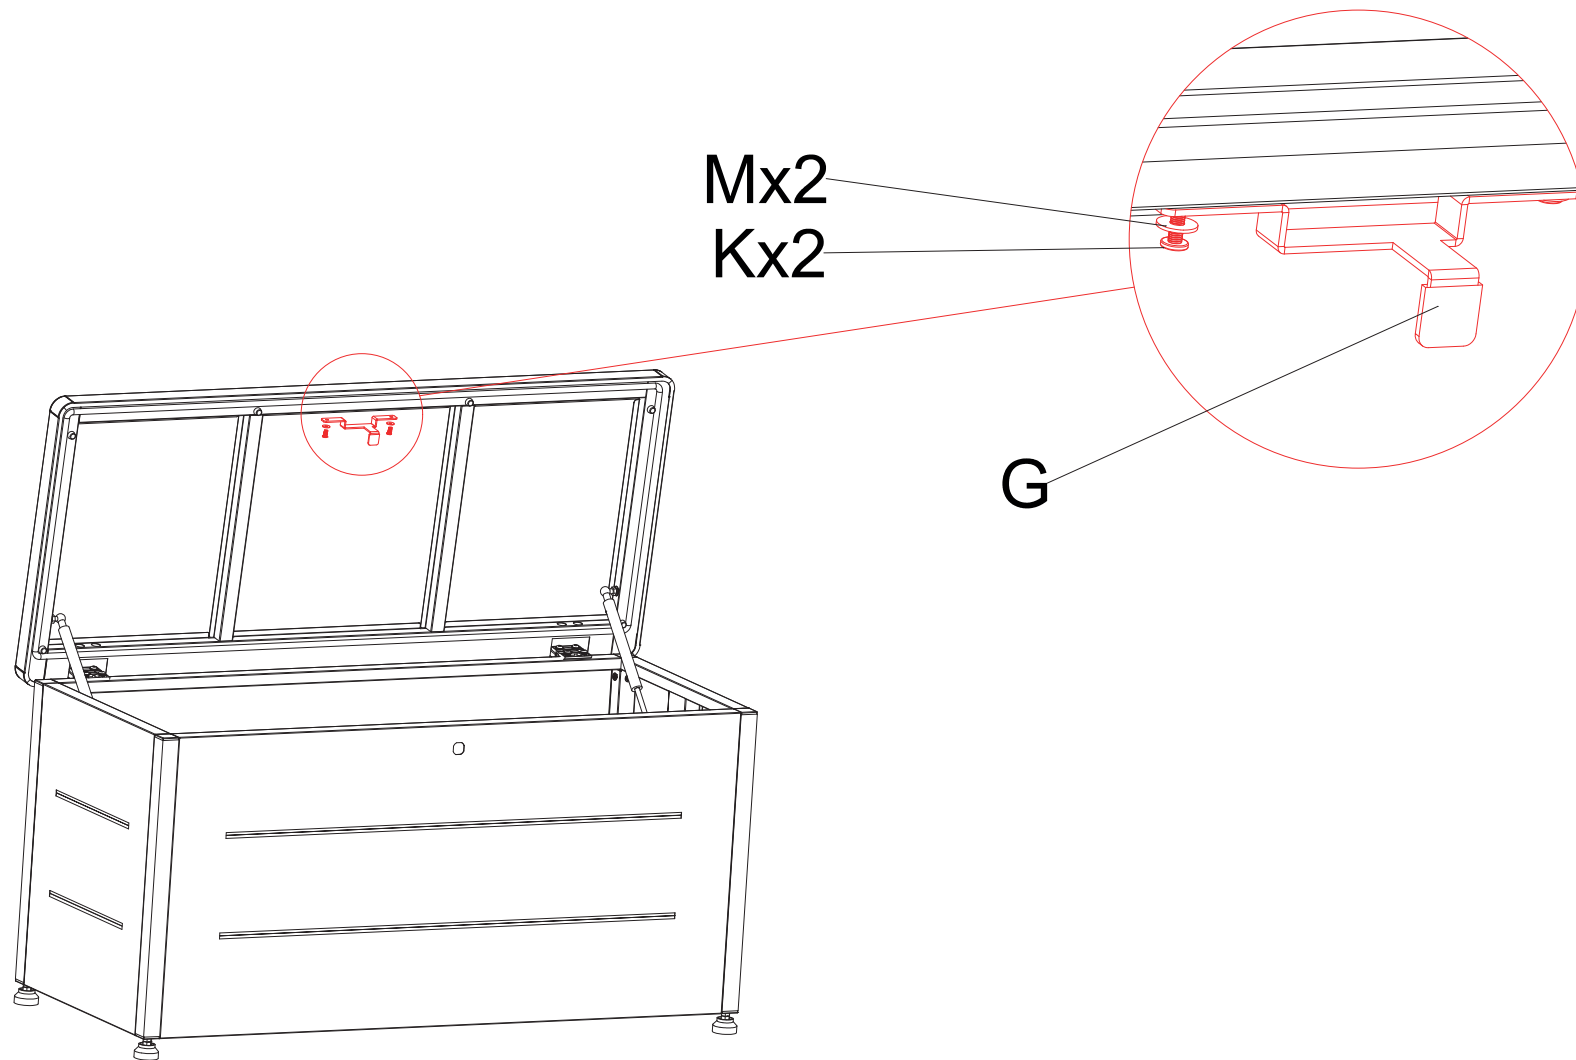

STEP9

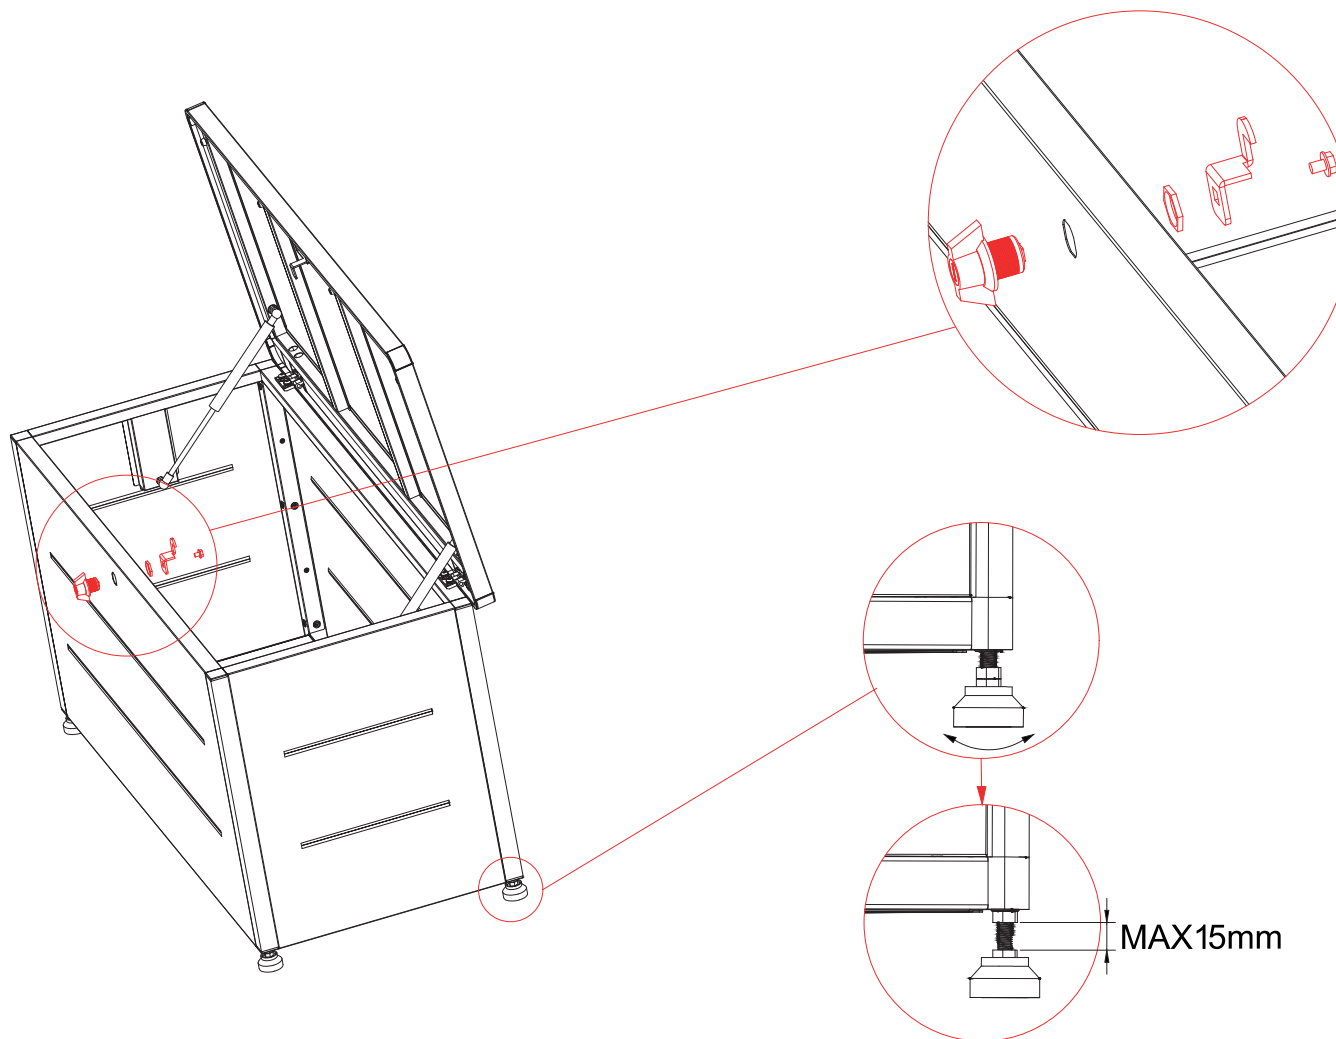

DE: Nach der Installation des Griffs justieren Sie die verstellbaren Füße und verwenden Sie eine Wasserwaage, um sicherzustellen, dass die Box gerade ist.

EN: After installing the handle, adjust the adjustable feet and use a spirit level to ensure that the box is level.