


**Gary Metall-Terrassenschrank 1/
Gary Metal Terrace Cabinet 1**

weka

Art.-Nr: 7010012

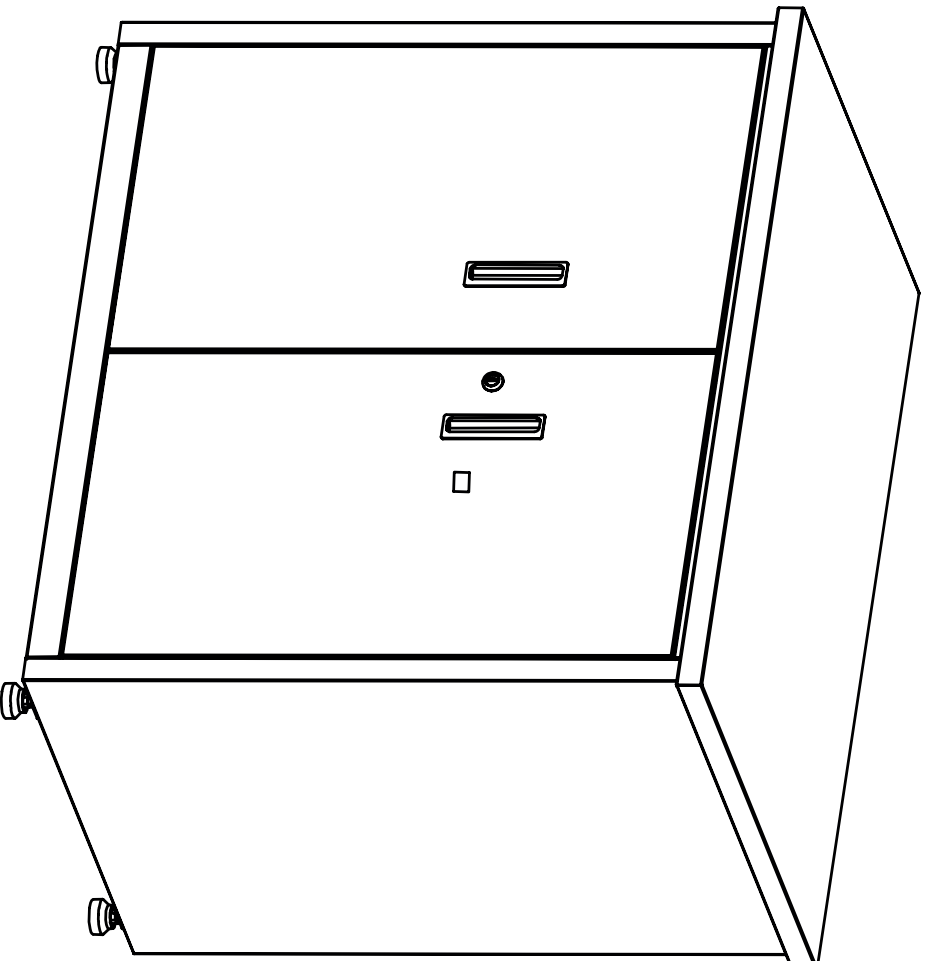


**Montageanleitung/
Assembly instructions**


**weka Holzbau GmbH
Postfach 20 02 04
D-17013 Neubrandenburg**

www.weka-holzbau.com


**Sie erreichen uns/ You can reach us:
Mo - Fr 08:30 - 18:00 Uhr
+49 (0)395/42908-0**

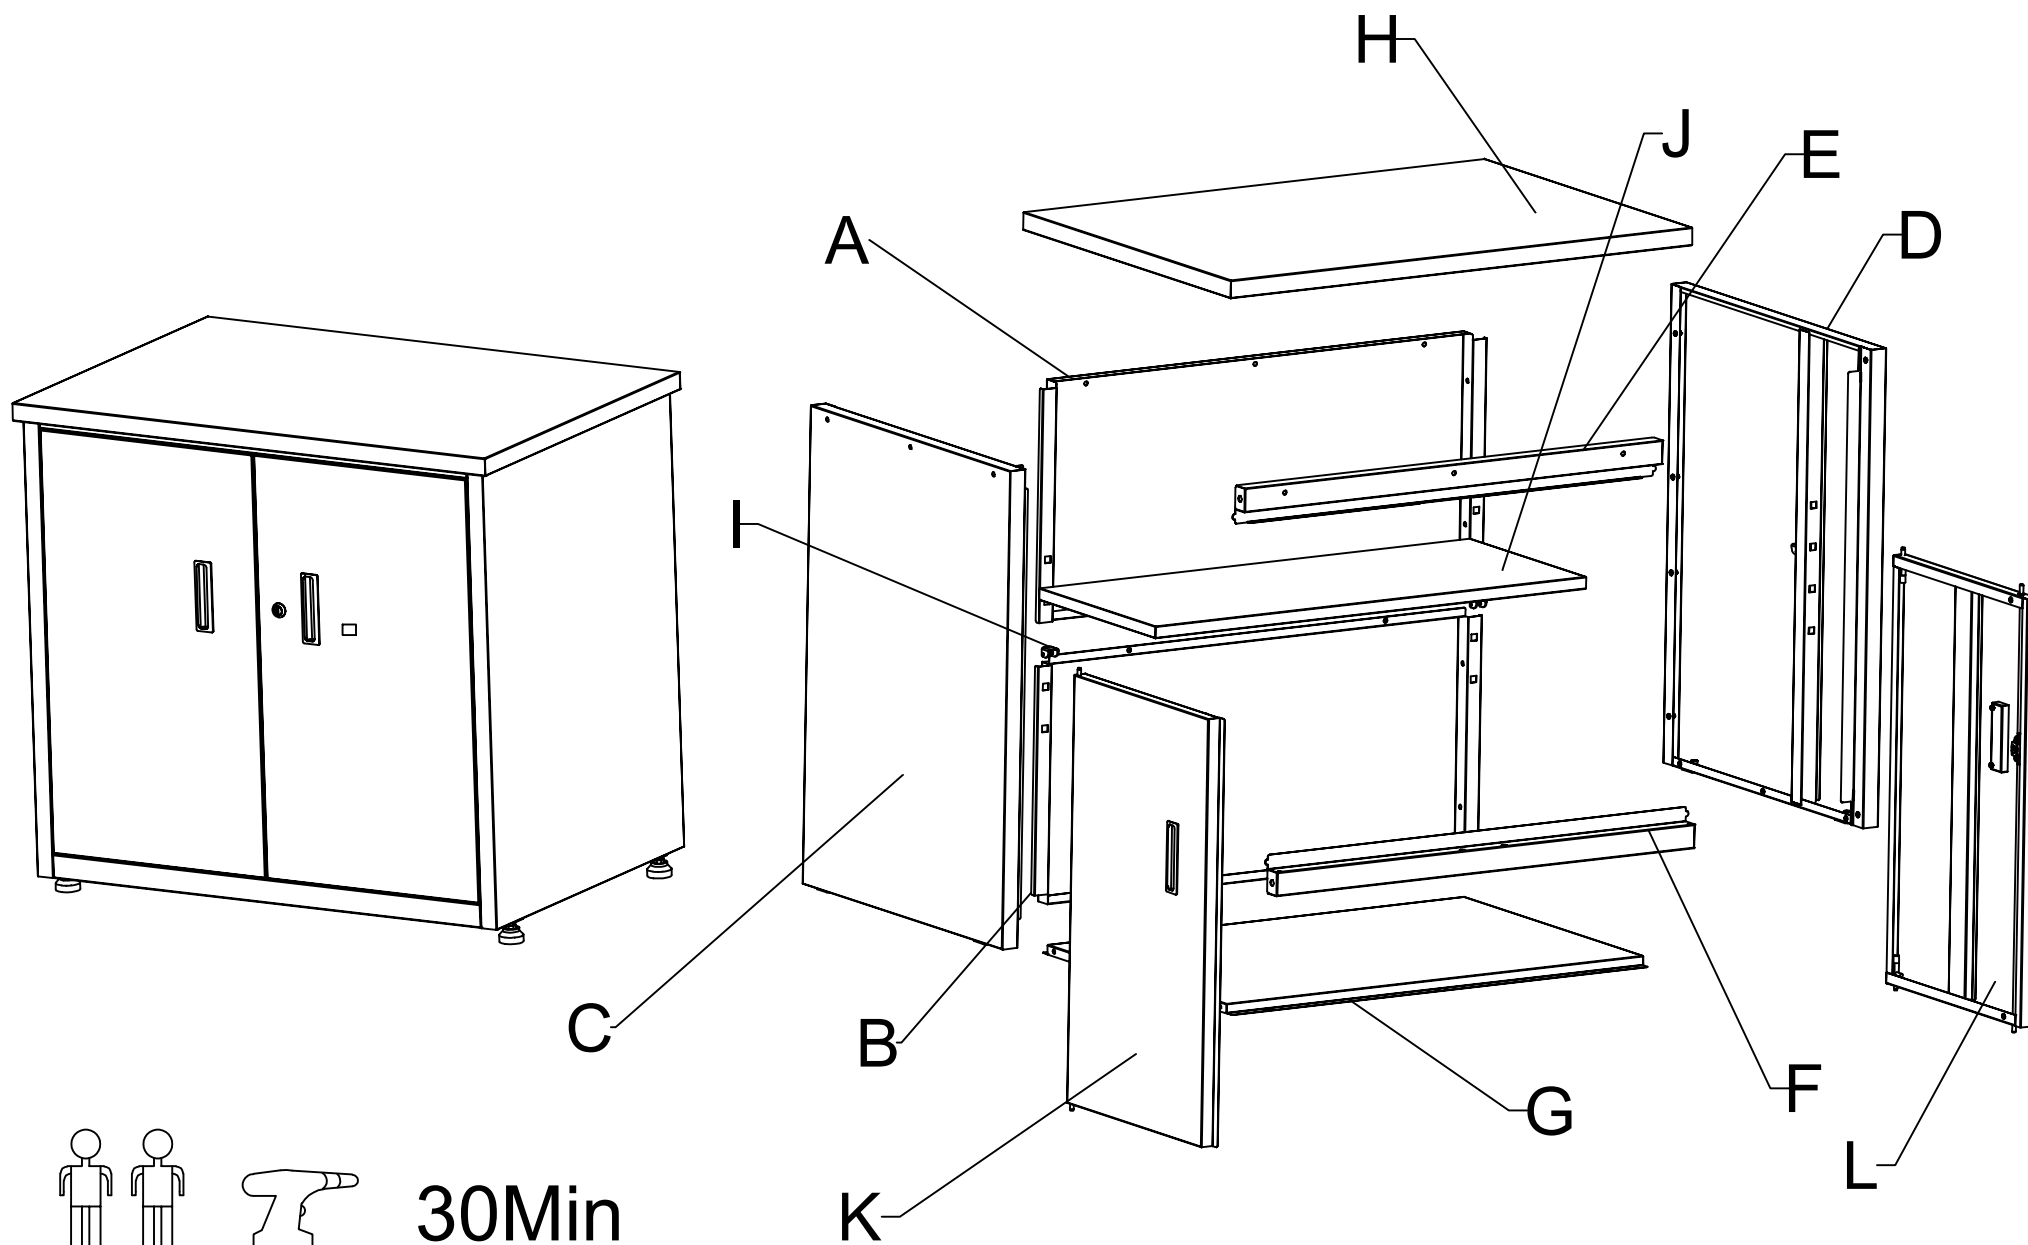


Ax1

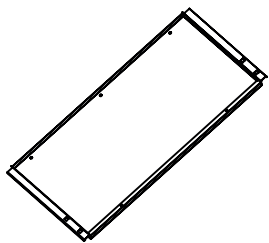


Bx1

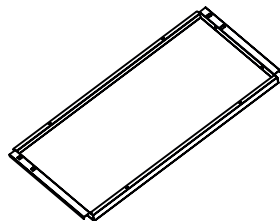


Cx1

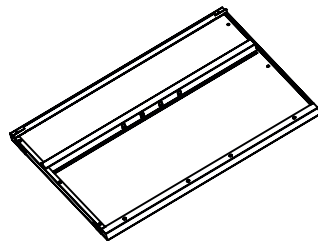


Dx1

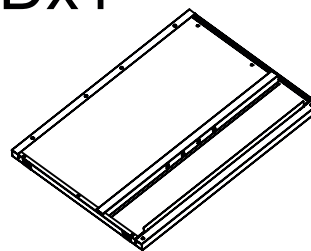


Ex1

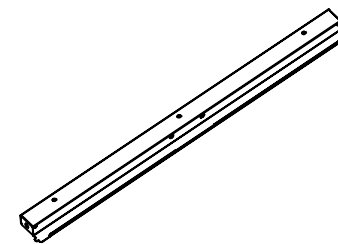

Fx1

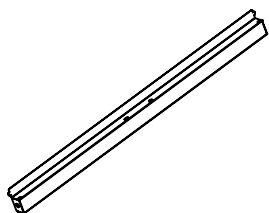


Gx1

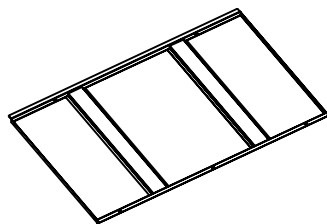


Hx1




Ix4

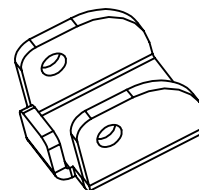


Jx1

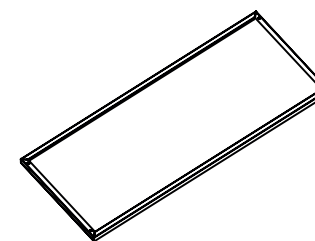


Kx1

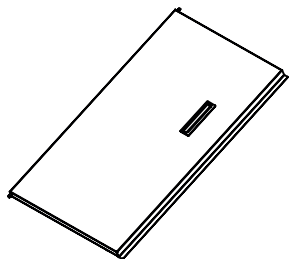

Lx1

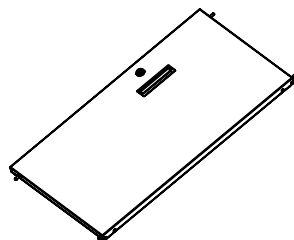


Mx37

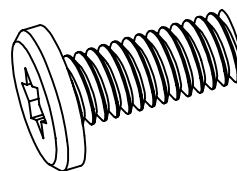


M4x10


Nx37

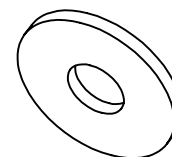


Ox4

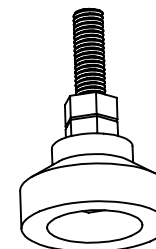


Px2

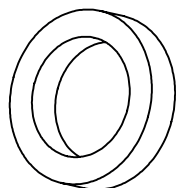

Qx4

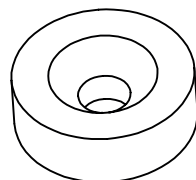


Rx4

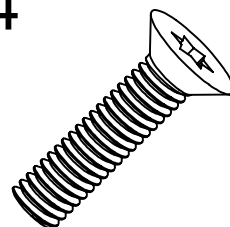


M4x14


Sx4

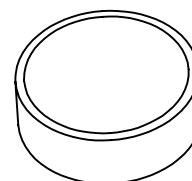

Tx1

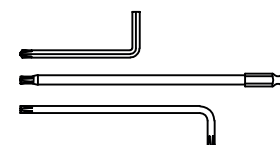

STEP1

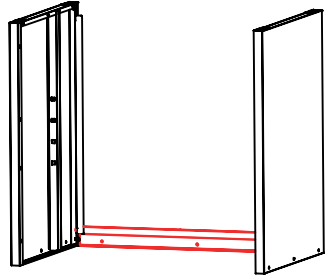


Cx1

Dx1





Ex1

Mx2

Nx2

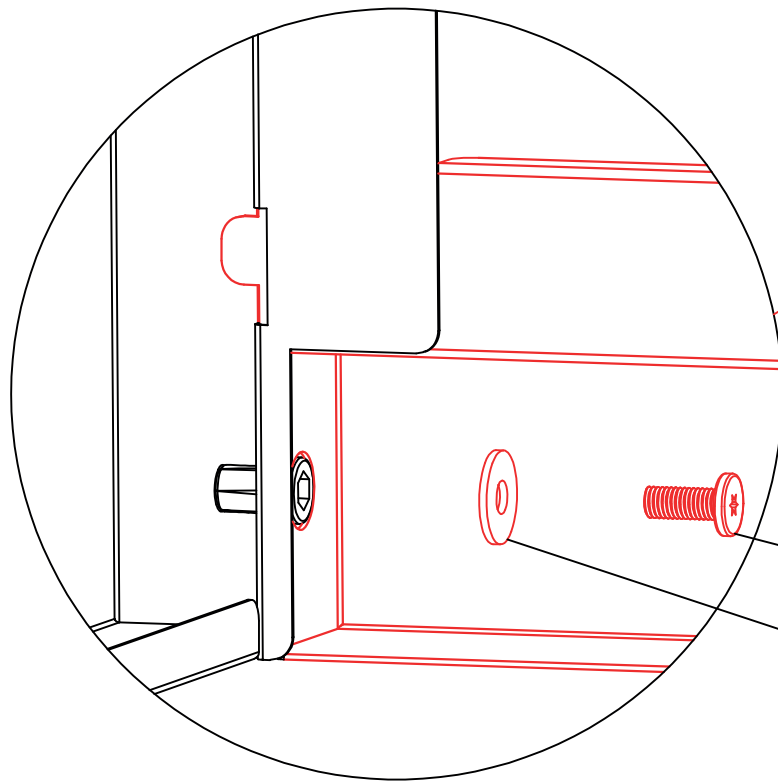


STEP2

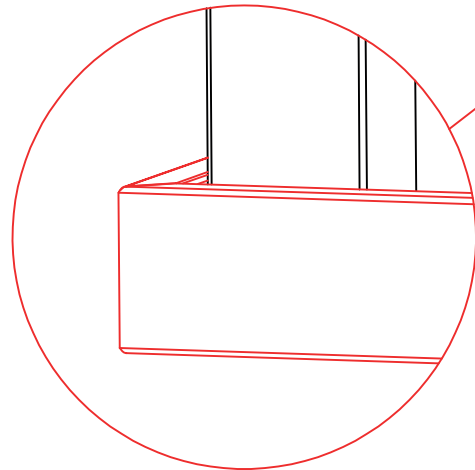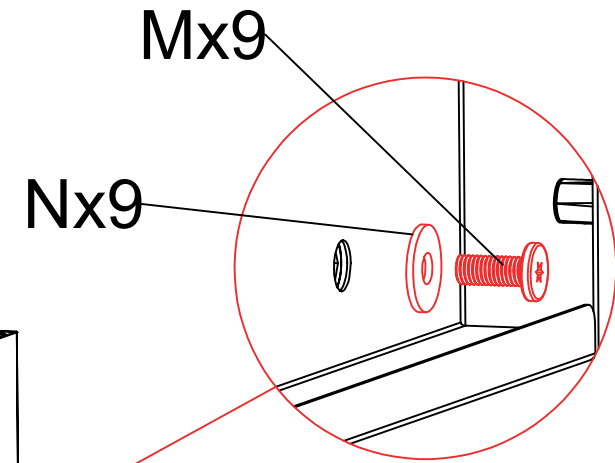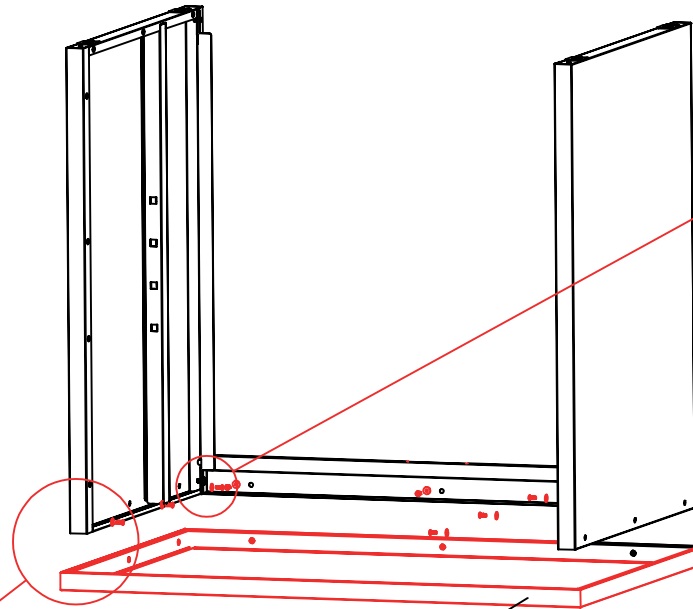
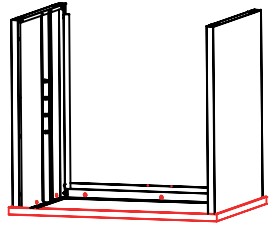


Hx1

STEP3

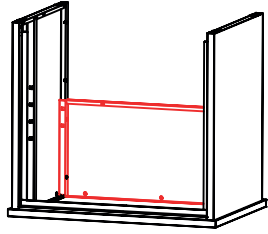




Ax1

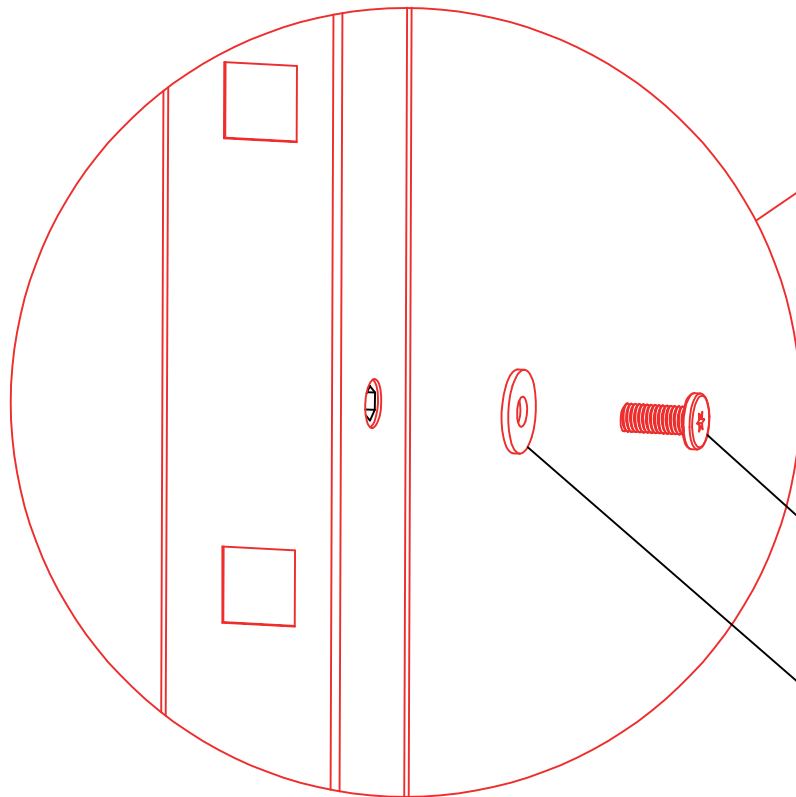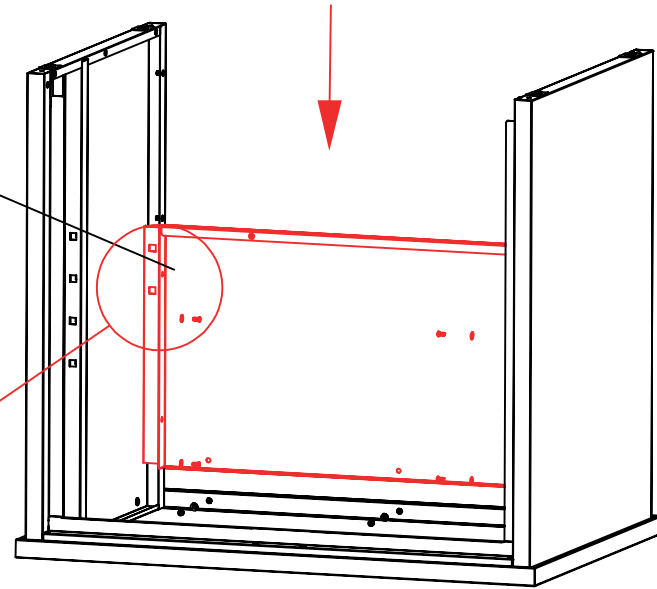




Mx7

Nx7



STEP4

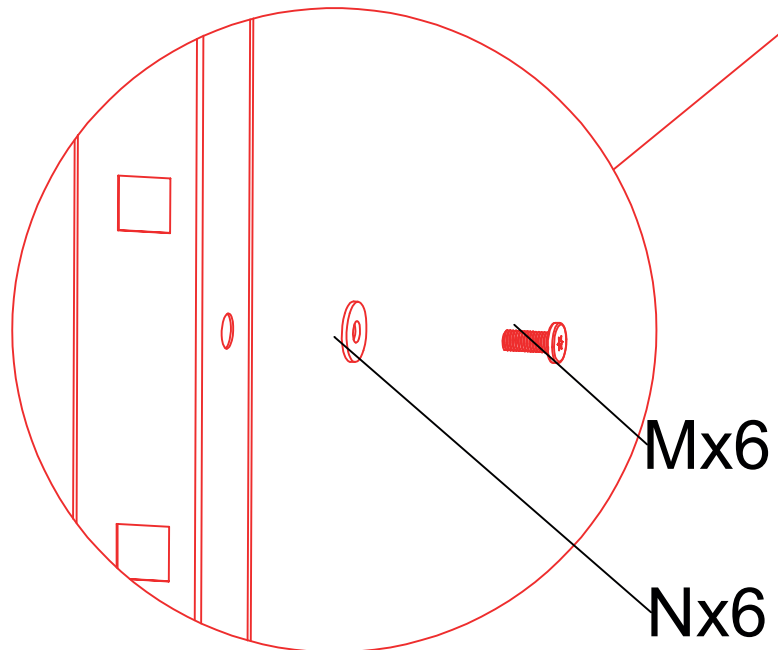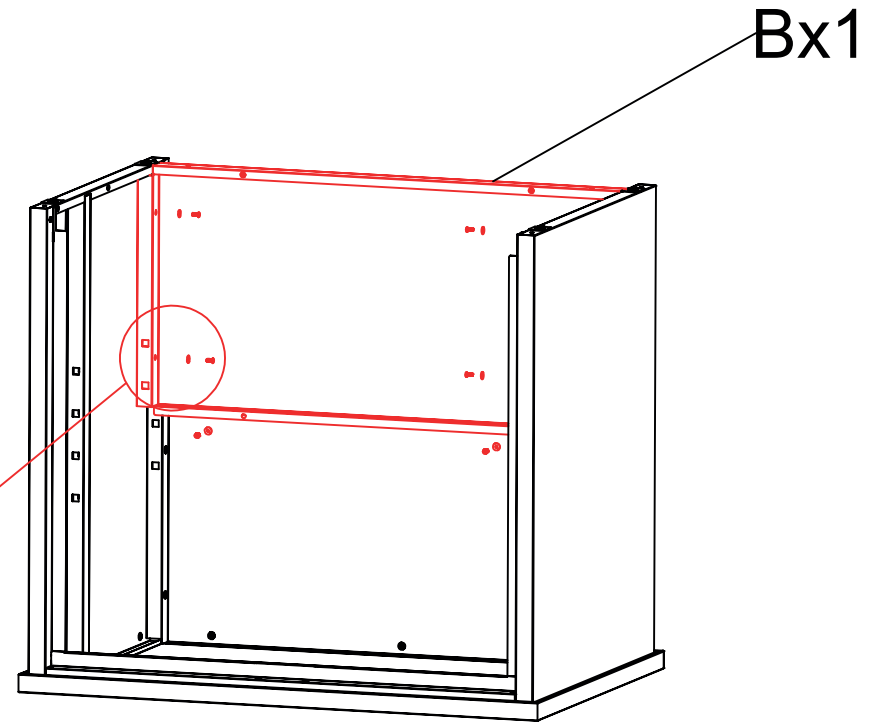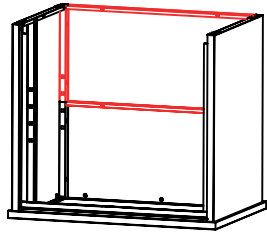


STEP5

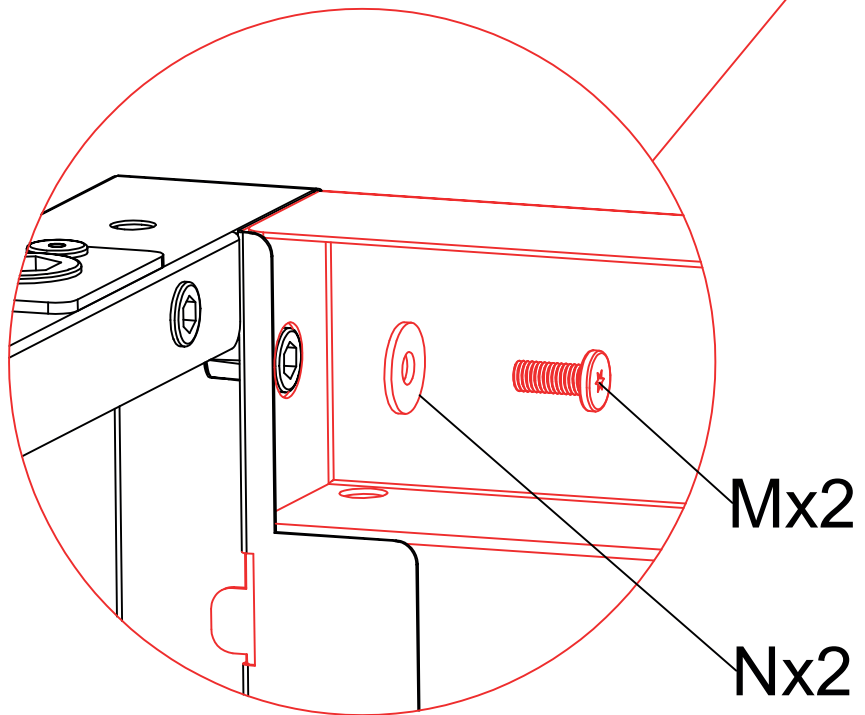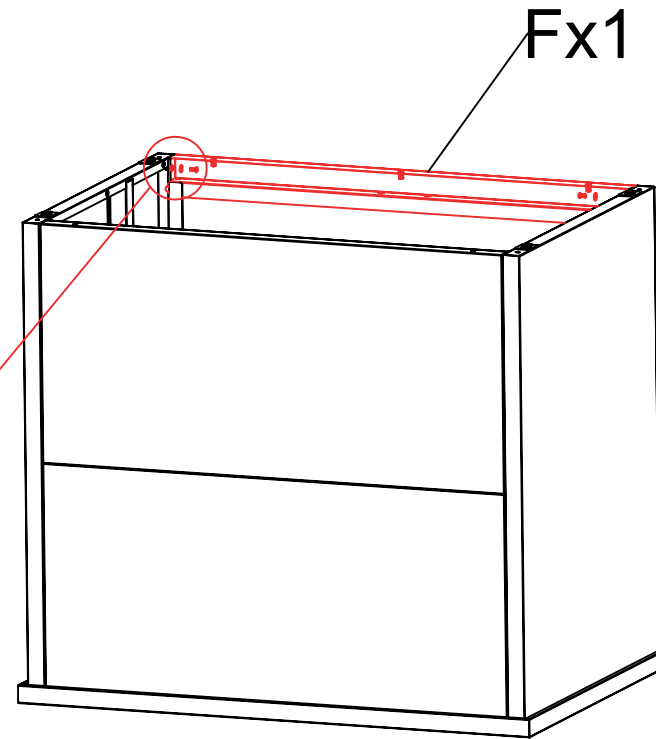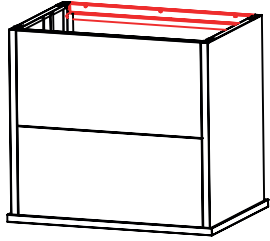

STEP6

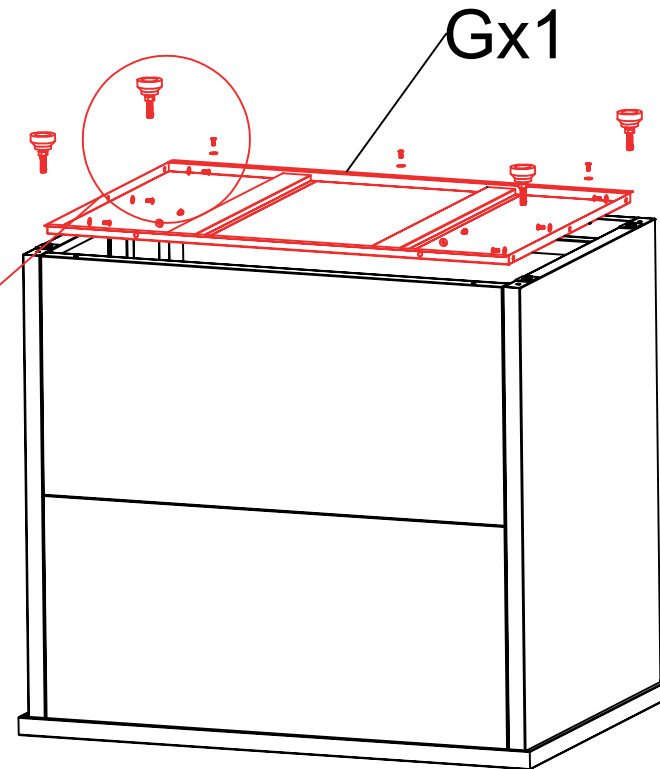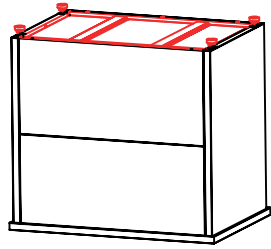



Ox4

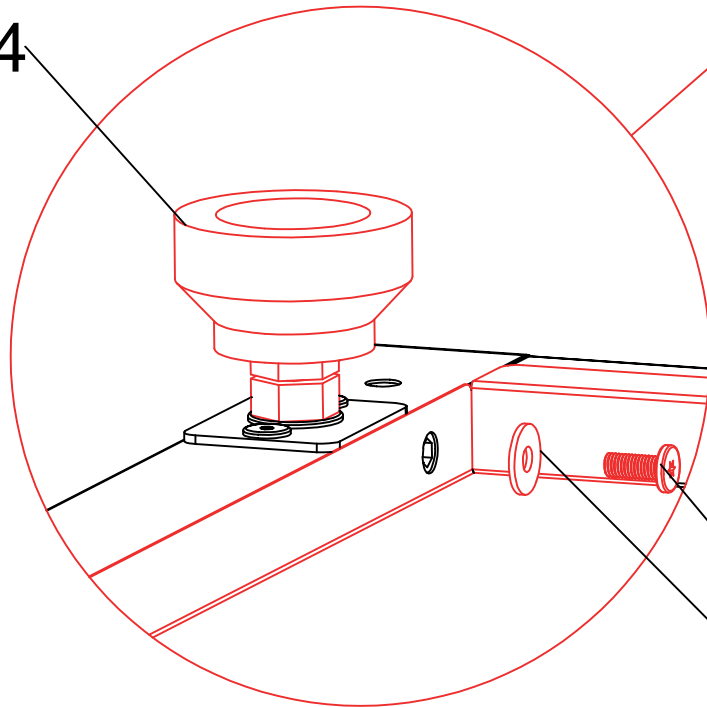

Mx11



Nx11

STEP7-1

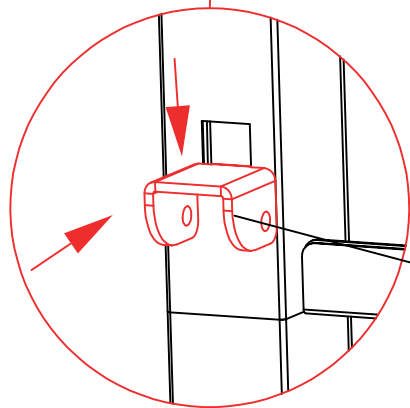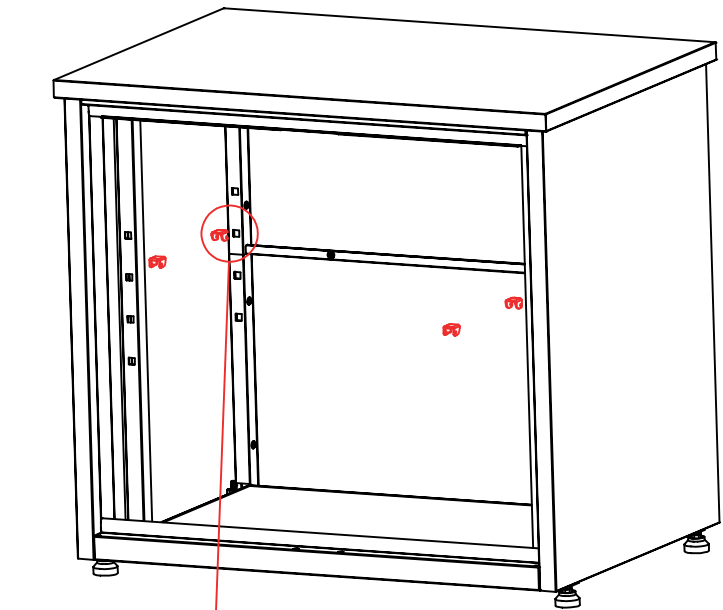

1x4

STEP7-2

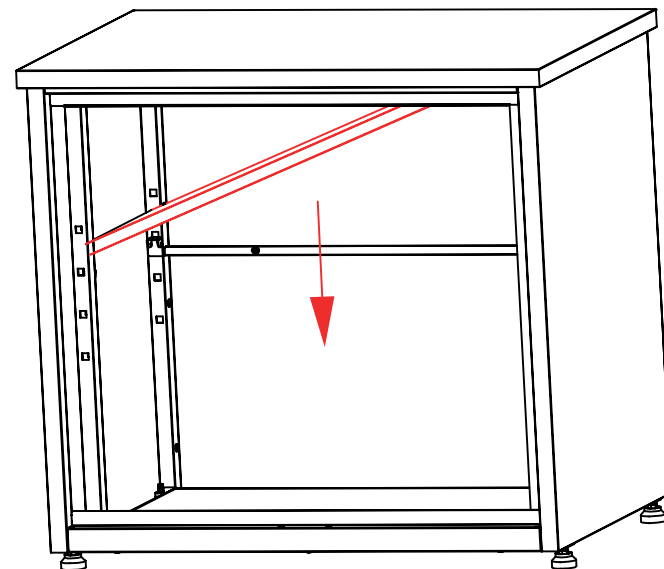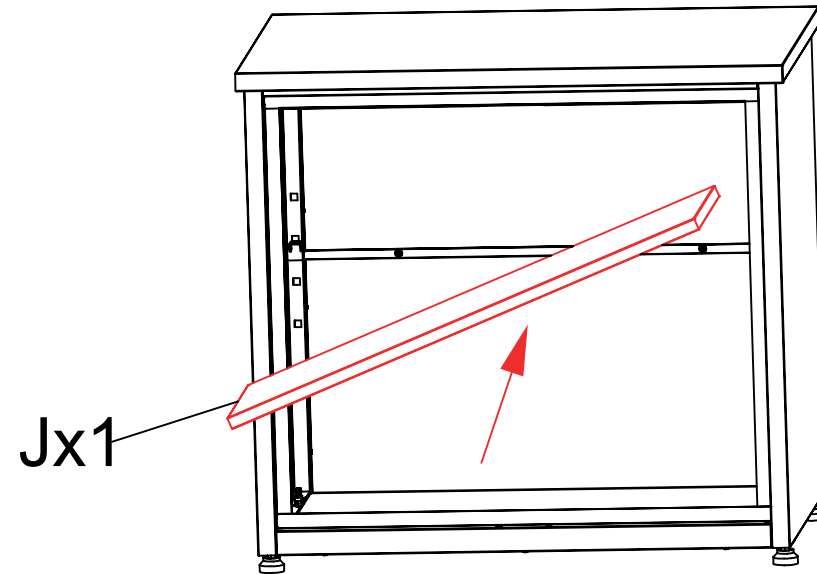

STEP8

